




***Pizza Dough Molder***  
***Model BE-IT-0406***  
***Item 13177***  
***Instruction Manual***



*Revised - 07/25/2016*



Toll Free: 1-800-465-0234  
Fax: 905-607-0234  
Email: [service@omcan.com](mailto:service@omcan.com)  
[www.omcan.com](http://www.omcan.com)

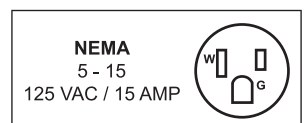

# ***Table of Contents***

Model BE-IT-0406

---

<b>Section</b>	<b>Page</b>
General Information -----	3 - 4
Safety and Warranty -----	4 - 5
Technical Specifications -----	5
Installation -----	6 - 7
Operation -----	8 - 9
Maintenance -----	10 - 11
Troubleshooting -----	11
Illustrated Drawings -----	12
Parts Breakdown -----	13 - 14
Electrical Schematics -----	15
Notes -----	16 - 18
Warranty Registration-----	19



# General Information

---

Omcan Manufacturing and Distributing Company Inc., Food Machinery of America, Inc. dba Omcan and Omcan Inc. are not responsible for any harm or injury caused due to any person's improper or negligent use of this equipment. The product shall only be operated by someone over the age of 18, of sound mind, and not under the influence of any drugs or alcohol, who has been trained in the correct operation of this machine, and is wearing authorized, proper safety clothing. Any modification to the machine voids any warranty, and may cause harm to individuals using the machine or in the vicinity of the machine while in operation.

## CHECK PACKAGE UPON ARRIVAL

Upon receipt of an Omcan shipment please inspect for external damage. If no damage is evident on the external packaging, open carton to ensure all ordered items are within the box, and there is no concealed damage to the machine. If the package has suffered rough handling, bumps or damage (visible or concealed), please note it on the bill of lading before accepting the delivery and contact Omcan within 24 hours, so we may initiate a claim with the carrier. A detailed report on the extent of the damage caused to the machine must be filled out within three days, from the delivery date shown in the shipping documents. Omcan has no recourse for damaged products that were shipped collect or third party.

**Before operating any equipment, always read and familiarize yourself with all operation and safety instructions.**

**Omcan would like to thank you for purchasing this machine. It's of the utmost importance to save these instructions for future reference. Also save the original box and packaging for shipping the equipment if servicing or returning of the machine is required.**

---

**Omcan Fabrication et distribution Compañie Limité et Food Machinery d'Amerique, dba Omcan et Omcan Inc. ne sont pas responsables de tout dommage ou blessure causé du fait que toute personne ait utilisé cet équipement de façon irrégulière. Le produit ne doit être exploité que par quelqu'un de plus de 18 ans, saine d'esprit, et pas sous l'influence d'une drogue ou d'acohol, qui a été formé pour utiliser cette machine correctement, et est vêtu de vêtements de sécurité approprié. Toute modification de la machine annule toute garantie, et peut causer un préjudice à des personnes utilisant la machine ou des personnes à proximité de la machine pendant son fonctionnement.**

## VÉRIFIEZ LE COLIS DÈS RÉCEPTION

Dès réception d'une expédition d'Omcan veuillez inspecter pour dommages externes. Si aucun dommage n'est visible sur l'emballage externe, ouvrez le carton afin de s'assurer que tous les éléments commandés sont dans la boîte, et il n'y a aucun dommage dissimulé à la machine. Si le colis n'a subi aucune mauvaises manipulations, de bosses ou de dommages (visible ou cachée), notez-le sur le bond de livraison avant d'accepter la livraison et contactez Omcan dans les 24 heures qui suivent, pour que nous puissions engager une réclamation auprès du transporteur. Un rapport détaillé sur l'étendue des dommages causés à la machine doit être rempli dans un délai de trois jours, à compter de la date de livraison indiquée dans les documents d'expédition. Omcan n'a aucun droit de recours pour les produits endommagés qui ont été expédiées ou cueilli par un tiers transporteur.

# General Information

---

Avant d'utiliser n'importe quel équipement, toujours lire et vous familiariser avec toutes les opérations et les consignes de sécurité.

Omcan voudrais vous remercier d'avoir choisi cette machine. Il est primordial de conserver ces instructions pour une référence ultérieure. Également conservez la boîte originale et l'emballage pour l'expédition de l'équipement si l'entretien ou le retour de la machine est nécessaire.

-----  
Omcan Empresa De Fabricacion Y Distribucion Inc. Y Maquinaria De Alimentos De America, Inc. dba Omcan y Omcan Inc. no son responsables de ningun daño o perjuicio causado por cualquier persona inadecuada o el uso descuidado de este equipo. El producto solo podra ser operado por una persona mayor de 18 años, en su sano juicio y no bajo alguna influencia de droga o alcohol, y que este ha sido entrenado en el correcto funcionamiento de esta máquina, y ésta usando ropa apropiada y autorizada. Cualquier modificación a la máquina anula la garantía y puede causar daños a las personas usando la máquina mientras esta en el funcionamiento.

## REVISE EL PAQUETE A SU LLEGADA

Tras la recepcion de un envio Omcan favor inspeccionar daños externos. Si no hay daños evidentes en el empaque exterior, Habra el carton para asegurarse que todos los articulos solicitados estén dentro de la caja y no encuentre daños ocultos en la máquina. Si el paquete ha sufrido un manejo de poco cuidado, golpes o daños (visible o oculto) por favor anote en la factura antes de aceptar la entrega y contacte Omcan dentro de las 24 horas, de modo que podamos iniciar una reclamación con la compañía. Un informe detallado sobre los daños causados a la máquina debe ser llenado en el plazo de tres días, desde la fecha de entrega que se muestra en los documentos de envío. Omcan no tiene ningun recurso por productos dañados que se enviaron a recoger por terceros.

**Antes de utilizar cualquier equipo, siempre leer y familiarizarse con todas las instrucciones de operación y seguridad.**

Omcan quisiera darles las gracias por la compra de esta máquina. Es de la máxima importancia para guardar estas instrucciones para referencias en el futuro. También guarde la caja original y el embalaje para envío del equipo si el mantenimiento o la devolución de la máquina es necesaria.

# Safety and Warranty

---

The following safety instructions must be followed in order to prevent hazardous conditions and/or possible injuries caused by electricity, mechanical parts, fire or of a hygienic nature. Failure to follow these instructions can be an element of danger for the user.

- **Keep the workplace tidy at all times.** Untidiness leads to the danger of accidents.
- **Assess the environmental conditions.** Do not use the machine on damp, wet or poorly lit premises, or near flammable liquids or gas. Keep a clearance of at least 50 cm from the machine.
- **Keep children and unauthorised people away.** Do not let them come near the machine or the workplace.

# Safety and Warranty

---

- **Use the machine within the rating plate power and only for the use allowed.** Without overloading it, it will work better and be safer. When the machine is working the surfaces inside the chambers, those adjacent and the glass fronted doors get extremely hot and can be a burning hazard.
- **Dress appropriately.** Do not wear clothes or accessories that hang that could get caught in moving parts. Wear slip-proof shoes. For hygiene reasons, as well as safety, wear a hairnet for long hair and gloves to protect hands.
- **Protect the power cable.** Do not pull on the cable to take it out of the socket. Do not expose the cable to high temperatures. Do not let the cable touch sharp edges, water or solvents.
- **Avoid insecure positions.** Find the most suitable position to guarantee your balance at all times.
- **Always be very careful.** Pay attention to your work. Do not use the machine when you are distracted.
- **Take the plug out of the socket.** After each use of the machine and before cleaning, servicing or moving it. The specifications of the power outlet must be compatible with the plug fitted on the cable.
- **Extension leads in the open.** It must not be used.
- **Check that the machine is not damaged.** Before using the appliance, check carefully that the safety devices are working efficiently. Check that the movable parts are not jammed, that there are no damaged components, that all the parts have been mounted correctly, and that all the conditions that could influence the proper working order of the appliance are ideal.
- **Always have qualified personnel repair the machine.** Repairs must be done by qualified personnel only and with original spare parts.

## 1 YEAR PARTS AND BENCH WARRANTY

Within the warranty period, contact Omcan Inc. at 1-800-465-0234 to schedule a drop off to either an Omcan authorized service depot in the area, or to an Omcan Service warehouse to repair the equipment.

Unauthorized maintenance will void the warranty. Warranty covers electrical and part failures, not improper use.

Please see [www.omcan.com/warranty.html](http://www.omcan.com/warranty.html) for complete info.

### WARNING:

The packaging components are classified as normal solid urban waste and can therefore be disposed of without difficulty.

In any case, for suitable recycling, we suggest disposing of the products separately (differentiated waste) according to the current norms.

**DO NOT DISCARD ANY PACKAGING MATERIALS IN THE ENVIRONMENT!**

# Technical Specifications

---

<b>Model</b>	<b>BE-IT-0406</b>
<b>Power</b>	0.5 HP
<b>Dough Weight</b>	7.5 oz.-24.5 oz. / 212.6 - 694.5 g.
<b>Pizza Diameter</b>	11" - 15.75" / 279.4 - 400 mm
<b>Electrical</b>	110 V / 60Hz / 1Ph
<b>Dimensions (DWH)</b>	17" x 22" x 28" / 431.8 x 558.8 x 711.2 mm
<b>Packaging Dimensions</b>	31" x 24" x 23" / 787.4 x 609.6 x 584.2 mm
<b>Packaging Weight</b>	79 lbs. / 35.8 kg.
<b>Item Number</b>	13177

## Installation

---

### RESPONSIBILITIES OF THE USER

This machine is designed and made exclusively for use with food for cold rolling dough for bread and cakes with the aim of facilitating the forming of discs (without altering the dough's fundamental characteristics) in the preparation of:

- pizzas;
- bread;
- flat bread,
- buns, etc.

Each Dough Molder consists of:

- a metallic structure;
- two sets of rollers with relative protections.

The rollers are operated by means of belts, a card controlled electric motor electronic, powered by means of a cable at mains voltage, to which the following are connected at low voltage (12 V.) the front switching on (green) and switching off (red) controls integrated by a pedal connected to an outlet that controls starting-stopping.

### Read these instructions through carefully before using the machine.

The place, where the machine is to be installed, must have the following environmental characteristics:

- it must be dry;
- the water sources must be at a safe distance;
- ventilation and lighting must be suitable and comply with the hygiene and safety standards foreseen by the existing laws.

# Installation

---

## INSTALLATION PROCEDURES

The machine is supplied in closed packaging. After having removed the polystyrene protection and the machine from the pack, proceed as follows:

- Position the machine in the place set aside for it.
- Remove the protective film (F) without using tools that could damage the surfaces.
- Cut the two straps A-B that are locking the rod and balancing device (Fig. 1).

Mount the top chute and the two protections (Fig. 2) proceeding in the following way:

- Position the chute so the holes A - B - C match perfectly with the spacers A - B - C and then press by the chute holes until it clicks into place.
- Remove screws F - G - D - E, position the top protection so the holes F - G match perfectly with those underneath; now tighten the screws to lock the protection. Proceed in exactly the same way for the fixings D - E of the bottom protection.

## POSITIONING THE MACHINE

The surface, on which it stands, must be horizontal. Leave no obstacles of any kind in its immediate vicinity that could hinder its normal ventilation. The electrical outlet must be easy to access, no moving should be necessary.

The distance between the appliance and the outlet must be such that the power cable is not stretched taut and it must never be under the appliance's supporting feet.

## AREA NEEDED BY THE OPERATOR

Under normal operating conditions and for the optimum exploitation of all the appliance's potential, the operator needs the area illustrated in the figure below.

## ELECTRICAL CONNECTION

- To connect the appliance to the electricity mains, use a power cable with plug.
- The electricity mains must be fitted with an automatic RCD with characteristics suitable for those of the machine and where the distance between the contacts must be at least 3 mm. An effective earthing system is of paramount importance.
- Check that the supply voltage and frequency of the system are compatible with the values specified in the Technical Specifications and on the plate on the back of the machine.

# Operation

---

## CONTROL DEVICES

On the front (Fig. 4):

- GREEN key → Starting
- RED key → Stopping
- GREEN indicator → Machine running

## FUNCTIONAL TEST

The machine is ready for the functional test once the plugs have been plugged into the mains socket.

**Starting:** Press the green key; the indicator lights up and the machine starts.

**Stopping:** Press the red key; the machine stops and the indicators turns off.

Start the machine without any load for 1 minute to make sure it is working properly. Before starting a new work cycle, make sure that the machine is perfectly clean, especially the surfaces that come into contact with the dough. If necessary, clean as per the instructions in the Maintenance section.

## USING THE MACHINE (Fig. 3)

- Press the GREEN key. The machine starts the two pairs of rollers moving and is now ready to work.
- Before putting the ball of lightly floured dough into the opening of the top protection, which has been left to rise for at least 4-6 hours, make one edge of the dough into a wedge to help it slip in between the pair of top rollers (3).
- When it comes through these rollers the dough will have been made slightly thinner (S) and oval in shape then, sliding along the balancing device it turns crosswise about 90° (4) ready for the next passage through the pair of bottom rollers (5) from where it comes through in the shape of a disc (6) whose shape, good but not optimum, needs a little adjusting by hand.

## STOPPING THE MACHINE

- Press the RED key.

## USING THE PEDAL CONTROL

The pedal control is supplied only on the customer's request.

Its use, which integrates the front controls for starting and stopping, is to keep the machine working only for the time strictly necessary to do the job.

- This control is to be connected to the machine by plugging the cable plug into the machine's socket.

### Starting

- By pressing the green key the machine starts but remains in the waiting mode.
- By pressing the pedal control slightly the rollers start turning and the machine is ready for use.

### Stopping

- Lift your foot off the pedal control and the machine stops.

**WARNING:** Press the red key when the working phase is finished.



The adjustments recommended are only indicative since they will have to be defined by experimenting due to the presence of the following variables:

- dough characteristics;
- weight;
- thickness;
- size;
- shape of the disc.

**WARNING:** All adjustments are to be done with the machine still.

## ADJUSTING THE THICKNESS

To meet individual requirements, the machine can provide different thicknesses of dough by rotating levers A-B into position Min to Max (Fig. 4); pull the black knob to release them. The thickness is changed according to the direction in which the levers are turning:

- minimum thickness (-) turn clockwise;
- maximum thickness (+) turn counter clockwise.

For best results, we suggest differentiating the adjustments. E.g.: lever A in position IV; lever B in position II.

**WARNING:** To avoid cutting the dough, send it through the rollers once only.

## ADJUSTING THE FORM

To obtain a good disc shape it is essential to adjust the sensitivity of the scale unit (rod) + balancing device with the variations of dough weight. The purpose is to change its position from vertical 4 to perfectly horizontal 5 before it goes through the bottom rollers.

## ADJUSTING THE SCALE

With this adjustment, we adjust dough descent speed. After loosening the securing screw, the counterweight can slide along the rod so that different scale calibrations can be selected.

**Maximum sensitivity:** Position the counterweight towards the inside of the rod; recommended for light weights.

**Minimum sensitivity:** Position the counterweight towards the end of the rod; recommended for heavy weights.

When you have finished adjusting, lock the counterweight by tightening the screw.

## ADJUSTING THE BALANCING DEVICE

With this adjustment, we adjust dough descent speed.

- Unscrew the locking screw to change the position of counterweight and the sensitivity, based on position, in one of the three holes of the balancing device.

**Maximum sensitivity:** Position the counterweight in the innermost hole; recommended for light weights.

**Medium sensitivity:** Position the counterweight in the centre hole; recommended for medium weights.

**Minimum sensitivity:** Position the counterweight in the outermost hole; recommended for heavy weights.

# Maintenance

---

Before carrying out any maintenance work, including cleaning, the oven must be disconnected from the electricity supply and completely cooled. In the event of a malfunction, contact only the assistance centres authorised by the manufacturer.

## **CLEANING** (Fig. 4)

The machine must be cleaned at the end of each use, in compliance with the hygiene regulations and to safeguard machine operation:

- With the aid of a suitable brush, proceed with a first pass to remove residuals of flour and dough.
- Remove the two protections, the balancing device, and the two chutes from their seats.
- Release the springs (N).
- Pull the dough scrapers out (P - Q).
- Turn the adjustment levers round to position Max, the maximum open position of rollers (K).
- Clean the machine and all parts, including those that were removed, using a sponge or cloth dampened with water and detergent.
- Rinse sufficiently to remove all the detergent.
- Dry with kitchen paper. Go over the surfaces in contact with the dough first and then the whole machine with a soft, clean cloth soaked with a disinfectant specific for foodgrade machines.

For cleaning it is forbidden to use:

- abrasive, corrosive or non foodgrade chemicals
- blasts or drips of water
- tools in general
- abrasive powders
- rough or abrasive products, such as steel wool, sponges etc., that can damage the surfaces and in particular compromise safety from a hygiene point of view.

Re-assemble in this order:

- the dough scrapers
- the springs
- the chutes
- the balancing device
- the protections

Make sure that all the parts have been positioned and fixed correctly.

## **LUBRICATING SHAFTS AND ROLLERS** (Fig. 5)

The shafts and rollers must be lubricated once a year.


- Remove the protections, chutes, springs and dough scrapers.
- Loosen the securing screws.
- Remove the back (A) first, then remove the supports (B and C).
- Pull the rollers (D, E, F, G) and joints (H, I, L, M) out.
- Clean all parts thoroughly using a sponge, warm water, and a foodgrade detergent.
- Rinse sufficiently and dry with absorbent paper.

# Maintenance

- Lubricate both shafts and holes of the rollers with a reasonable quantity of paraffin oil.
- Re-assemble and fix all the parts removed previously working in the reverse order.

## REPLACING THE FUSES

- Loosen the securing screws.
- Remove the back (A).
- Find which fuses have blown on the control unit (B).
- Change them with new ones that have the same characteristics.
- Put the back panel (A) back and fix it with the screws.

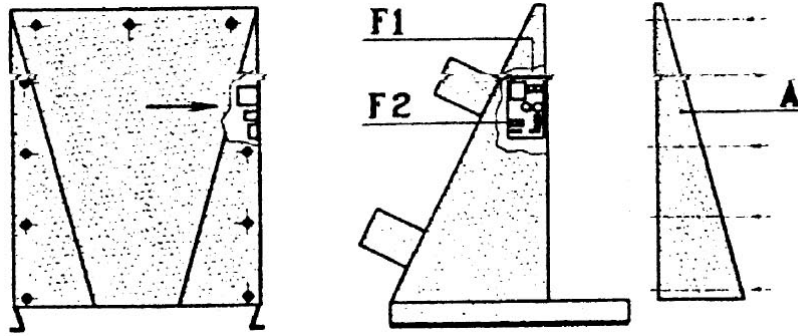

# Troubleshooting

PROBLEM	CAUSE	REMEDY
The machine does not start.	There is no electricity.	Check the general meter, the outlet, the plug and the power cable.
	The pedal control is connected to the machine.	Press the pedal controls.
The machine stops while it is being used.	Fuses blown.	Replace the fuses following the instructions in Replacing the Fuses section under Maintenance.

# Illustrated Drawings

Fig. 1

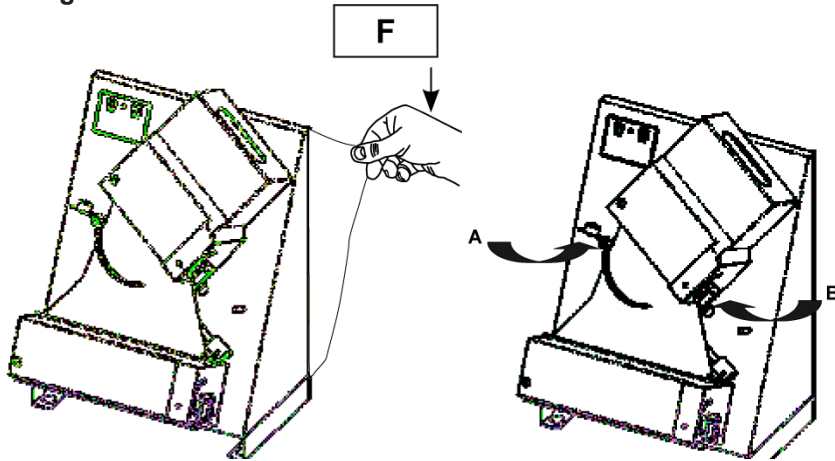


Fig. 3

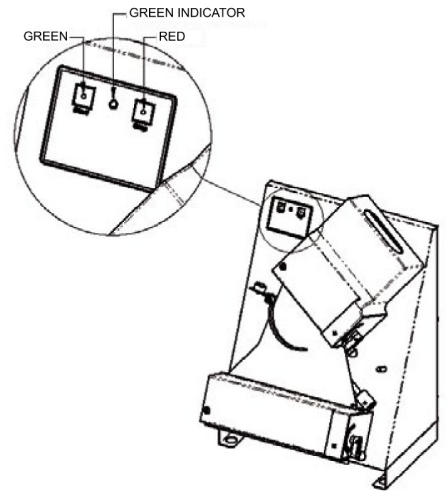


Fig. 2

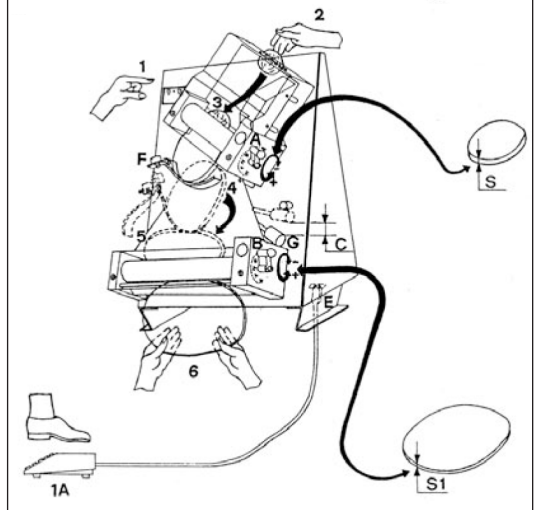
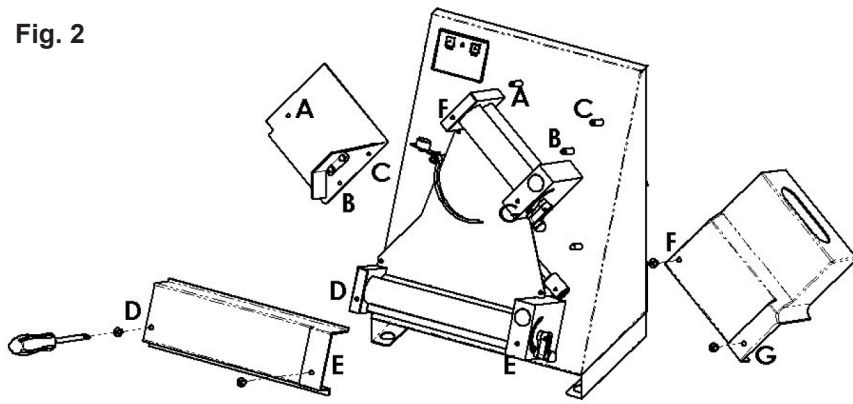


Fig. 4



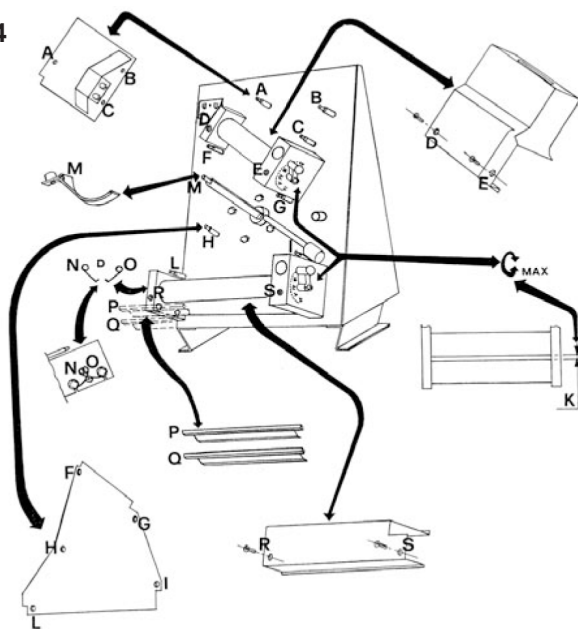


Fig. 5

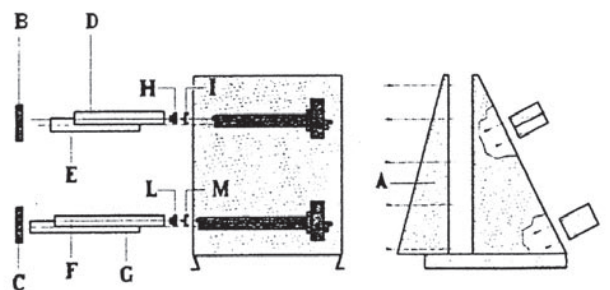

# Parts Breakdown

Model BE-IT-0406 13177

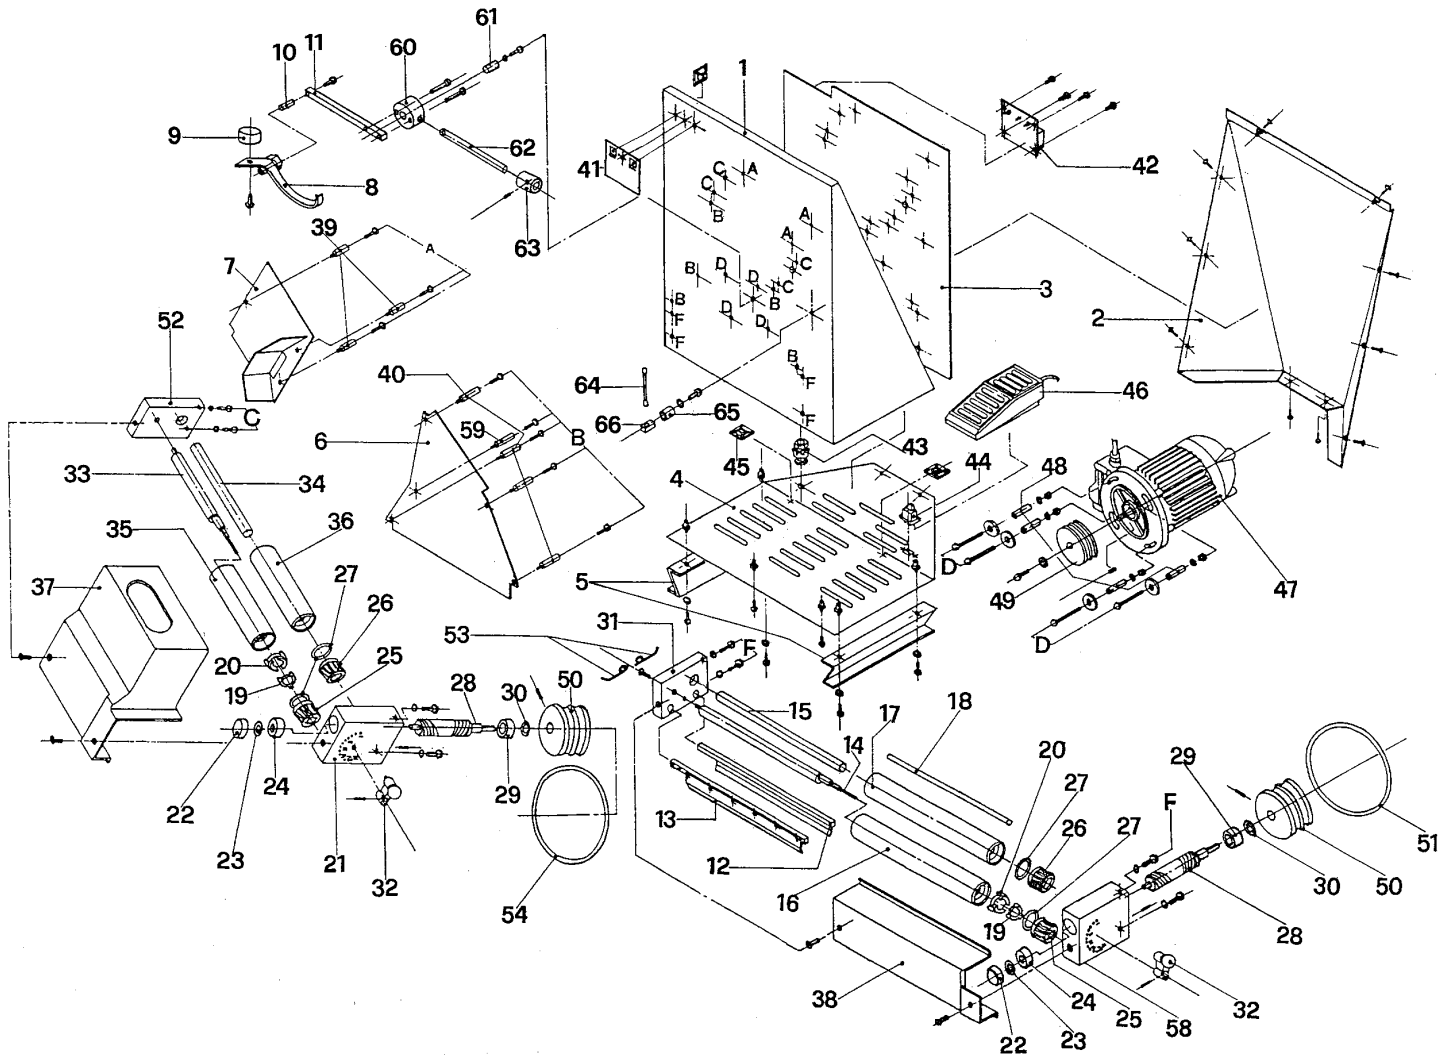


# Parts Breakdown

## Model BE-IT-0406 13177

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
78833	Inox Plate for SPR40	1	14570	Plug for SPR40	22	78866	Pedal for SPR40	45
78834	Grey Plastic Box for SPR40	2	14576	Plug for SPR40	23	78867	Motor for SPR40	46
78835	Plastic Feet for SPR40	3	14575	Bearing for SPR40	24	78868	Motor Support Screws for SPR40	47
78836	Lower Steel Slide for SPR40	4	14567	Gear, Comes with SPR40 Elastic Ring	25	78869	Reduction Pulley for SPR40	48
78837	Upper Steel Slide for SPR40	5	14568	Gear, Comes with SPR40 Elastic Ring	26	18683	Pulley for SPR40	49
78838	Lifting Beam Assembly for SPR40	6	14573	Ring for SPR40	27	78870	Upper Small Support for SPR40	50
78839	Counter Weight Scale for SPR40	7	78851	O-Ring for SPR40	28	18684	O-Ring Belt for SPR40	51
78840	Counter Weight Pin for SPR40	8	78853	Upper Eccentric Shaft for SPR40	30	78871	Feet for SPR40	52
78841	Scale Shaft for SPR40	9	78854	Upper Cylindrical Shaft for SPR40	31	30424	Springs for SPR30 / SPR40	53
78842	Back Scraper for SPR40	10	14569	Handle for SPR40	32	14574	Belt 8 x 784 for SPR40	54
78843	Front Scraper for SPR40	11	78855	Upper Eccentric Roller for SPR40	33	78872	Lower Reduction Gear Support for SPR40	58
78844	Lower Eccentric Shaft for SPR40	12	78856	Upper Cylindrical Roller for SPR40	34	78873	Spacer for SPR40	59
78845	Lower Cylindrical Shaft for SPR40	13	78857	Upper Guard for SPR40	35	78874	Scale Unit for SPR40	60
78846	Lower Cylindrical Roller for SPR40	14	78858	Lower Guard for SPR40	36	78875	Stainless Steel Pin for SPR40	61
78847	Steel Rod for SPR40	15	78859	Spacers Upper Slide for SPR40	37	78876	Scale Shaft for SPR40	62
17674	Lower Roller for SPR40	16	78860	Spacers Lower Slide for SPR40	39	78877	Counter Weight Scale for SPR40	63
78848	Lower Reduction Gear Support for SPR40	17	78861	Control Unit Label for SPR40	40	78878	Counter Weight Accessory for SPR40	64
78849	Cylindrical Screw for SPR40	18	78862	Control Panel Board for SPR40	41	78879	Counter Weight Accessory for SPR40	65
14572	Spacer for SPR40	19	78863	Cable Fastener for SPR40	42	78880	Counter Weight Accessory for SPR40	66
14571	Spacer for SPR40	20	78864	Pedal Accessoryfor SPR40	43			
78850	6202 ZZ Bearing for SPR40	21	78865	Control Panel Accessory for SPR40	44			

# Electrical Schematics

Model **BE-IT-0406** 13177

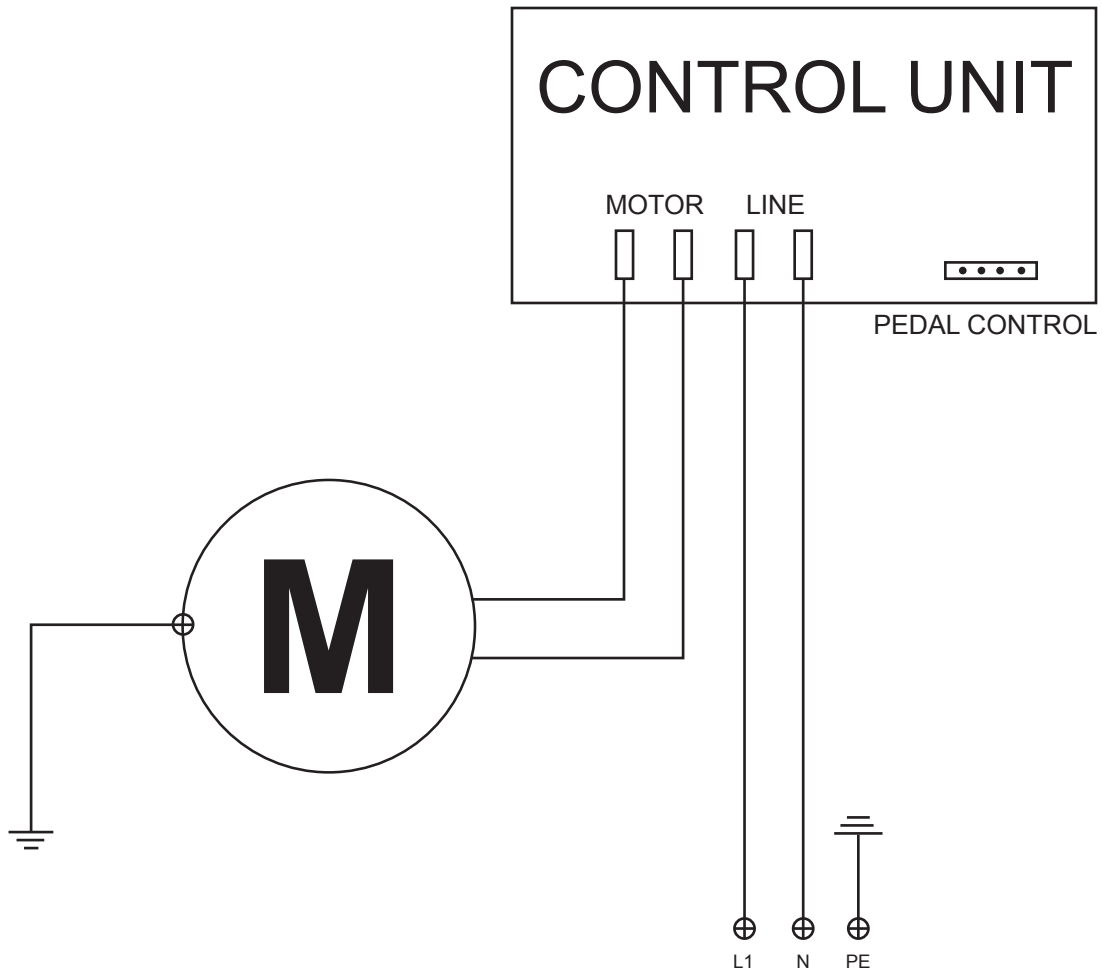

# Notes

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---









# Warranty Registration

Thank you for purchasing an Omcan product. To register your warranty for this product, complete the information below, tear off the card at the perforation and then send to the address specified below. You can also register online by visiting:

Merci d'avoir acheté un produit Omcan. Pour enregistrer votre garantie pour ce produit, complétez les informations ci-dessous, détachez la carte au niveau de la perforation, puis l'envoyer à l'adresse spécifiée ci-dessous. Vous pouvez également vous inscrire en ligne en visitant:

Gracias por comprar un producto Omcan usted. Para registrar su garantía para este producto, complete la información a continuación, cortar la tarjeta en la perforación y luego enviarlo a la dirección indicada a continuación. También puede registrarse en línea en:

**[www.omcan.com/warrantyregistration.html](http://www.omcan.com/warrantyregistration.html)**

**For mailing in Canada**

**Pour postale au Canada**

**Por correo en Canadá**

**OMCAN**

PRODUCT WARRANTY REGISTRATION

3115 Pepper Mill Court,

Mississauga, Ontario

Canada, L5L 4X5

**For mailing in the US**

**Pour diffusion aux États-Unis**

**Por correo en los EE.UU.**

**OMCAN**

PRODUCT WARRANTY REGISTRATION

4450 Witmer Industrial Estates, Unit 4,

Niagara Falls, New York

USA, 14305

**or Email to: [service@omcan.com](mailto:service@omcan.com)**



**Purchaser's Information**

Name: \_\_\_\_\_

Company Name: \_\_\_\_\_

Address: \_\_\_\_\_

Telephone: \_\_\_\_\_

City: \_\_\_\_\_ Province or State: \_\_\_\_\_ Postal or Zip: \_\_\_\_\_

Email Address: \_\_\_\_\_

Country: \_\_\_\_\_

Type of Company:

Restaurant  Bakery  Deli

Butcher  Supermarket  Caterer

Dealer from which Purchased: \_\_\_\_\_

Institution (*specify*): \_\_\_\_\_

Dealer City: \_\_\_\_\_ Dealer Province or State: \_\_\_\_\_

Other (*specify*): \_\_\_\_\_

Invoice: \_\_\_\_\_

Model Name: \_\_\_\_\_ Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Machine Description: \_\_\_\_\_

Date of Purchase (MM/DD/YYYY): \_\_\_\_\_

Date of Installation (MM/DD/YYYY): \_\_\_\_\_

Would you like to extend the warranty?  Yes  No

**Thank you for choosing Omcan | Merci d'avoir choisi Omcan | Gracias por elegir Omcan**



Since 1951 Omcan has grown to become a leading distributor of equipment and supplies to the North American food service industry. Our success over these many years can be attributed to our commitment to strengthen and develop new and existing relationships with our valued customers and manufacturers. Today with partners in North America, Europe, Asia and South America, we continually work to improve and grow the company. We strive to offer customers exceptional value through our qualified local sales and service representatives who provide convenient access to over 3,500 globally sourced products.

---

Depuis 1951 Omcan a grandi pour devenir un des “leaders” de la distribution des équipements et matériel pour l’industrie des services alimentaires en Amérique du Nord. Notre succès au cours de ces nombreuses années peut être attribué à notre engagement à renforcer et à développer de nouvelles et existantes relations avec nos clients et les fabricants de valeur. Aujourd’hui avec des partenaires en Amérique du Nord, Europe, Asie et Amérique du Sud, nous travaillons continuellement à améliorer et développer l’entreprise. Nous nous efforçons d’offrir à nos clients une valeur exceptionnelle grâce à nos ventes locales qualifiées et des représentants de service qui offrent un accès facile à plus de 3500 produits provenant du monde entier.

---

Desde 1951 Omcan ha crecido hasta convertirse en un líder en la distribución de equipos y suministros de alimentos en América del Norte industria de servicios. Nuestro éxito en estos años se puede atribuir a nuestro compromiso de fortalecer y desarrollar nuevas relaciones existentes con nuestros valiosos clientes y fabricantes. Hoy con socios de América del Norte, Europa, Asia y América del Sur, que trabajan continuamente para mejorar y crecer la empresa. Nos esforzamos por ofrecer a nuestros clientes valor excepcional a través de nuestro local de ventas y representantes de los servicios que proporcionan un fácil acceso a más de 3,500 productos con origen a nivel mundial.

