



Refrigerated Sandwich Prep Units

Models PT-CN-0686-HC, 1194-HC, 1524-HC, 1778-HC, 0711-HC,
1194-H, 1537-HC
Items 50045, 50046, 50047, 50048, 50049, 50050, 50051

Instruction Manual



Revised - 09/26/2017



Toll Free: 1-800-465-0234
Fax: 905-607-0234
Email: service@omcan.com
www.omcan.com



NEMA
5 - 15
125 VAC / 15 AMP
RECEPTACLE



Table of Contents

Model PT-CN-0686-HC / Model PT-CN-1194-HC / Model PT-CN-1524-HC
Model PT-CN-1778-HC / Model PT-CN-0711-HC / Model PT-CN-1194-H
Model PT-CN-1537-HC

Section	Page
General Information -----	3 - 4
Safety and Warranty -----	4 - 5
Technical Specifications -----	6
Installation -----	7 - 8
Maintenance -----	8 - 9
Troubleshooting -----	9 - 10
Controller Instructions -----	11 - 13
Parts Breakdown -----	14 - 27
Electrical Schematics -----	28 - 34
Warranty Registration -----	35



General Information

Omcan Manufacturing and Distributing Company Inc., Food Machinery of America, Inc. dba Omcan and Omcan Inc. are not responsible for any harm or injury caused due to any person's improper or negligent use of this equipment. The product shall only be operated by someone over the age of 18, of sound mind, and not under the influence of any drugs or alcohol, who has been trained in the correct operation of this machine, and is wearing authorized, proper safety clothing. Any modification to the machine voids any warranty, and may cause harm to individuals using the machine or in the vicinity of the machine while in operation.

CHECK PACKAGE UPON ARRIVAL

Upon receipt of an Omcan shipment please inspect for external damage. If no damage is evident on the external packaging, open carton to ensure all ordered items are within the box, and there is no concealed damage to the machine. If the package has suffered rough handling, bumps or damage (visible or concealed), please note it on the bill of lading before accepting the delivery and contact Omcan within 24 hours, so we may initiate a claim with the carrier. A detailed report on the extent of the damage caused to the machine must be filled out within three days, from the delivery date shown in the shipping documents. Omcan has no recourse for damaged products that were shipped collect or third party.

Before operating any equipment, always read and familiarize yourself with all operation and safety instructions.

Omcan would like to thank you for purchasing this machine. It's of the utmost importance to save these instructions for future reference. Also save the original box and packaging for shipping the equipment if servicing or returning of the machine is required.

Omcan Fabrication et distribution Companie Limité et Food Machinery d'Amerique, dba Omcan et Omcan Inc. ne sont pas responsables de tout dommage ou blessure causé du fait que toute personne ait utilisé cet équipement de façon irrégulière. Le produit ne doit être exploité que par quelqu'un de plus de 18 ans, saine d'esprit, et pas sous l'influence d'une drogue ou d'alcool, qui a été formé pour utiliser cette machine correctement, et est vêtu de vêtements de sécurité approprié. Toute modification de la machine annule toute garantie, et peut causer un préjudice à des personnes utilisant la machine ou des personnes à proximité de la machine pendant son fonctionnement.

VÉRIFIEZ LE COLIS DÈS RÉCEPTION

Dès réception d'une expédition d'Omcan veuillez inspecter pour dommages externes. Si aucun dommage n'est visible sur l'emballage externe, ouvrez le carton afin de s'assurer que tous les éléments commandés sont dans la boîte, et il n'y a aucun dommage dissimulé à la machine. Si le colis n'a subi aucune mauvaises manipulations, de bosses ou de dommages (visible ou cachée), notez-le sur le bond de livraison avant d'accepter la livraison et contactez Omcan dans les 24 heures qui suivent, pour que nous puissions engager une réclamation auprès du transporteur. Un rapport détaillé sur l'étendue des dommages causés à la machine doit être rempli dans un délai de trois jours, à compter de la date de livraison indiquée dans les documents d'expédition. Omcan n'a aucun droit de recours pour les produits endommagés qui ont été expédiées ou cueillies par un tiers transporteur.

General Information

Avant d'utiliser n'importe quel équipement, toujours lire et vous familiariser avec toutes les opérations et les consignes de sécurité.

Omcan voudrais vous remercier d'avoir choisi cette machine. Il est primordial de conserver ces instructions pour une référence ultérieure. Également conservez la boîte originale et l'emballage pour l'expédition de l'équipement si l'entretien ou le retour de la machine est nécessaire.

Omcan Empresa De Fabricacion Y Distribucion Inc. Y Maquinaria De Alimentos De America, Inc. dba Omcan y Omcan Inc. no son responsables de ningun daño o perjuicio causado por cualquier persona inadecuada o el uso descuidado de este equipo. El producto solo podra ser operado por una persona mayor de 18 años, en su sano juicio y no bajo alguna influencia de droga o alcohol, y que este ha sido entrenado en el correcto funcionamiento de esta máquina, y ésta usando ropa apropiada y autorizada. Cualquier modificación a la máquina anula la garantía y puede causar daños a las personas usando la máquina mientras esta en el funcionamiento.

REVISE EL PAQUETE A SU LLEGADA

Tras la recepcion de un envio Omcan favor inspeccionar daños externos. Si no hay daños evidentes en el empaque exterior, Habra el carton para asegurararse que todos los articulos solicitados estén dentro de la caja y no encuentre daños ocultos en la máquina. Si el paquete ha sufrido un manejo de poco cuidado, golpes o daños (visible o oculto) por favor anote en la factura antes de aceptar la entrega y contacte Omcan dentro de las 24 horas, de modo que podamos iniciar una reclamación con la compañía. Un informe detallado sobre los daños causados a la máquina debe ser llenado en el plazo de tres días, desde la fecha de entrega que se muestra en los documentos de envío. Omcan no tiene ningun recurso por productos dañados que se enviaron a recoger por terceros.

Antes de utilizar cualquier equipo, siempre lea y familiarizarse con todas las instrucciones de funcionamiento y seguridad.

Omcan le gustaría darle las gracias por la compra de esta máquina. Es de la mayor importancia para salvar estas instrucciones para futuras consultas. Además, guarda la caja original y el embalaje para el envío del equipo si servicio técnico o devolución de la máquina que se requiere.

Safety and Warranty

Please pay close attention to the safety notices in this section. Disregarding these notices may lead to serious injury and/or damage to the unit.

ATTENTION

- To minimize shock and fire hazards, be sure not to overload outlet. Please designate one outlet for your unit.



Safety and Warranty

- Do not use extension cords.
- Do not put your hands under the unit when the unit is required to be moved.
- When the unit is not in use for a long period of time, please unplug the unit from the outlet.
- After unplugging the unit, wait at least 10 minutes before re-plugging it. Failure to do so could cause damage to the compressor.

UNPLUG CORD

- To minimize shock and fire hazards, please do not plug or unplug the cord with wet hands.
- During maintenance and cleaning, please unplug the unit.

PROPER GROUNDING REQUIRED

- To minimize shock and fire hazards, make sure that the unit is properly grounded.

PROHIBITION

- Do not attempt to remove or repair any component unless instructed by factory.
- Make sure that the unit is not resting on or against the electrical cord and plug.
- To minimize personal injury, do not hang on the doors.
- Do not store any flammable and explosive gas or liquids inside the unit.
- Do not attempt to alter or tamper with the electrical cord.

1 YEAR PARTS AND LABOUR WARRANTY

Within the warranty period, contact Omcan Inc. at 1-800-465-0234 to schedule an Omcan authorized service technician to repair the equipment locally.

Unauthorized maintenance will void the warranty. Warranty covers electrical and part failures, not improper use.

Please see www.omcan.com/warranty.html for complete info.

WARNING:

The packaging components (cardboard, polyethylene, and others) are classified as normal solid urban waste and can therefore be disposed of without difficulty.

In any case, for suitable recycling, we suggest disposing of the products separately (differentiated waste) according to the current norms.

DO NOT DISCARD ANY PACKAGING MATERIALS IN THE ENVIRONMENT!

Technical Specifications

REFRIGERATED PREP TABLES

Model	PT-CN-0686-HC	PT-CN-1194-HC	PT-CN-1524-HC	PT-CN-1778-HC
Temperature Range	0.5°C ~ 5°C / 33°F ~ 41°F			
Horsepower	1/5 HP	1/4+ HP		3/4 HP
Electrical	115 V / 60 Hz / 1PH			
Amps	2.88	4.56	4.8	8.9
Refrigerant	R290			
Isolation Material	R141B			
Number of Doors	1	2	3	
Number of Shelves	1	2	3	
Shelf Capacity	90 lbs. / 40.8 kgs.			
Exterior Dimensions	27.5" x 29.5" x 42.5" 698 x 750 x 1075mm	47" x 29.5" x 42.5" 1188 x 750 x 1075mm	60" x 29.5" x 42.5" 1529 x 750 x 1075mm	70" x 29.5" x 42.5" 1787 x 750 x 1075mm
Interior Dimensions	24" x 23.8" x 23.5" 610 x 605 x 597mm	42.8" x 23.8" x 23.5" 1088 x 605 x 597mm	56.3" x 23.8" x 23.5" 1429 x 605 x 597mm	66.4" x 23.8" x 23.5" 1687 x 605 x 597mm
Net Volume	160 L / 5.7 cu. ft.	268 L / 9.5 cu. ft.	428 L / 15 cu. ft.	440 L / 15.5 cu. ft.
Weight	176 lbs. / 79.8 kgs.	253 lbs. / 114.8 kgs.	348 lbs. / 157.9 kgs.	386 lbs. / 175.1 kgs.
Item Number	50045	50046	50047	50048

MEGA REFRIGERATED PREP TABLES

Model	PT-CN-0711-HC	PT-CN-1194-H	PT-CN-1537-HC
Temperature Range	0.5°C ~ 5°C / 33°F ~ 41°F		
Horsepower	1/5 HP	1/4+ HP	
Electrical	115 V / 60 Hz / 1 PH		
Amps	2.88	4.56	4.8
Refrigerant	R290		
Isolation Material	R141b		
Number of Doors	1	2	
Number of Shelves	1	2	
Shelf Capacity	90 lbs. / 40.8 kgs.		
Exterior Dimensions	27.5" x 34" x 46" 698 x 864 x 1166mm	47" x 34" x 46" 1188 x 864 x 1166mm	60" x 34" x 46" 1529 x 864 x 1166mm
Interior Dimensions	24" x 23.8" x 23.5" 610 x 605 x 597mm	42.83" x 23.82" x 23.5" 1088 x 605 x 597mm	56.26" x 23.82" x 23.5" 1429 x 605 x 597mm
Net Volume	160 L / 5.7 cu. ft.	268 L / 9.5 cu. ft.	428 L / 15 cu. ft.
Weight	198 lbs. / 89.8113 kgs.	298 lbs. / 135.171 kgs.	353 lbs. / 160.118 kgs.
Item Number	50049	50050	50051



Installation

IMPORTANT!!! PLEASE READ BEFORE INSTALLATION

- If the unit has recently been transported. Please let unit stand still for a minimum of 24 hours before plugging it in.
- Make sure that the unit drops down to desired temperature before loading the unit with product.
- Make sure that there is proper ventilation around the unit in the area where it will operate.
- Make sure all accessories are installed(i.e. shelves, shelf clips, casters) before plugging the unit in.
- Please read through the Operation / Owner's Manual in its entirety.

CABINET LOCATION GUIDELINES

- Install the unit on strong and leveled surfaces.
 - Unit may make unpleasant noises if surface is uneven.
 - Unit may malfunction if surface is uneven.
- Install the unit in an indoor, well-ventilated area.
 - Unit performs more efficiently in a well-ventilated area.
 - For best performance, please maintain clearance of 6" on the back of the unit.
 - Outdoor use may cause decreased efficiency and damage to the unit.
- Avoid installation in a high humidity and/or dusty area.
 - Humidity could cause unit to rust and decrease efficiency of the unit.
 - Dust collected on condenser coil will cause unit to malfunction. Clean the condenser at least once a month with a brush or clean cloth.
 - Malfunction due to dirty condenser will void warranty.
- Select a location away from heat and moisture-generating equipment.
 - High ambient temperature will cause the compressor to overwork, leading to higher energy bills and gradual breakdown of the unit.
 - Malfunction due to high ambient temperature will void warranty.

ELECTRICAL

Please ensure that the required voltage of the compressor is being supplied at all times. Low or high voltage can detrimentally affect the refrigeration unit. All units should be plugged into a grounded and properly-sized electrical outlet with appropriate overcurrent protection. Please refer to the electrical requirement on the nameplate of the unit. Please make sure that your unit has its own dedicated outlet. Do not use an extension cord.

TEMPERATURE CONTROLS

The temperature controls are factory-set to maintain an average temperature of 38°F in refrigeration. To maintain a different temperature, adjust it on the temperature controller—see *manual of temperature controller*.

CAUTION

Setting the temperature control to the coldest setting may cause the evaporator coil to freeze and ice up. This

Installation

will eventually result in a warmer cabinet temperature.

LOADING PRODUCT

Shelves have been factory-installed for your convenience. Before loading shelves, please be sure that all shelf clips are completely fastened in their correct locations. It is important that all shelves rest completely level before stocking your cabinet with product. In order to maintain correct air flow inside the unit, please be sure to leave two to four(2 to 4) inches of space between the back wall and stored product. Blocking the evaporator fans will result in a warmer cabinet temperature, and ultimately compressor failure.

DEFROST SYSTEMS

Refrigerator coils are kept below the freezing point(32°F). During compressor down-time, the evaporator fan continues to circulate air through the evaporator coil. This air circulation raises the coil temperature above the freezing point, melting any accumulated frost. Run-off water is drained into the evaporator pan and evaporated. Freezer coils are defrosted electrically. Automatic defrost timers are built-in to the refrigeration system and may not be adjusted. The defrost timers automatically initiate at pre-set intervals and for a pre-determined duration.

PLEASE NOTE: Excessive door opening should be avoided in order to maintain cabinet temperature and to eliminate the possibility of coil freeze-up.

LOADING FOOD PANS

Pizza prep units and sandwich prep units are designed to function with all pans in place, even if some pans are to be left empty. For maximum food freshness, Fill the pans only with an amount that can be used in a specific usage period. During non-use, please close the insulated lid cover.

Maintenance

CLEANING THE CONDENSER COIL

- For efficient operation, it is important that the condenser surface be kept free of dust, dirt, and lint.
- We recommend cleaning the condenser coil and fins at least once per month.
- Clean with a commercial condenser coil cleaner, available from any kitchen equipment retailer. Brush the condenser fins from top to bottom, not side to side.
- After cleaning, straighten any bent condenser fins with a fin comb.

CLEANING THE FAN BLADE AND MOTOR

- If necessary, clean the fan blades and motor with a soft cloth, If it is necessary to wash the fan blades, cover the fan motor to prevent moisture damage.



Maintenance

CLEANING THE INTERIOR OF UNIT

- When cleaning the cabinet interior, use a solvent of warm water and mild soap.
- Do not use steel wool, caustic soap, abrasive cleaners, or bleach that may damage the stainless steel surface.
- Wash door gaskets on a regular basis, preferably weekly. Simply remove door gasket from the frame of the door, soak in warm water and soap for thirty (30) minutes, dry with soft cloth, and replace.
- Check door gaskets for proper seal after they are replaced.
- Periodically remove the shelves and pilasters from the unit and clean them with mild soap and warm water. To remove the pilasters, first remove the shelves and shelf brackets. Then, simply lift the pilaster up and out.

WARNING

Disconnect power cord before cleaning any parts of the unit.

Troubleshooting

Before requesting any service on your unit, please check the following points. Please note that this guide serve only as a reference for solutions to common problems.

SYMPTOM	POSSIBLE CAUSE	CORRECTIVE ACTION
Compressor not running.	Fuse blown or circuit breaker tripped.	Replace fuse or reset circuit breaker.
	Power cord unplugged.	Plug in power cord.
	Thermostat set too high.	Set thermostat to lower Temperature.
	Cabinet in defrost cycle.	Wait for defrost cycle to finish.

Troubleshooting

Condensing unit runs for long periods of time.	Excessive amount of warm product Placed in cabinet.	Allow adequate time for Product to cool down.
	Prolonged door opening or door ajar.	Ensure doors are closed when not in use. Avoid opening doors for long periods of time.
	Door gasket(s) not sealing properly.	Ensure gaskets are snapped in Completely. Remove gasket and Wash with soap and water.
		Check condition of gasket and replace if necessary.
	Dirty condenser coil.	Clean the condenser coil.
Cabinet is noisy.	Evaporator coil iced over.	Unplug unit and allow coil to defrost. Make sure thermostat is not set too cold. Ensure that door gasket(s) are sealing properly.
	Loose part(s).	Locate and tighten loose part(s).
Cabinet Temperature Is too warm.	Tubing vibration.	Ensure tubing is free from contact with other tubing or components.
	Thermostat set too warm.	Set thermostat to lower Temperature.
	Blocking air flow.	Re-arrange product to allow for Proper air flow. Make sure there Is at least four inches of clearance from evaporator.
	Excessive amount of warm product Placed in cabinet.	Allow adequate time for product to cool down.
	Fuse blown or circuit breaker tripped.	Replace fuse or reset circuit breaker.
	Dirty condenser coil.	Clean the condenser coil.
	Prolonged door opening or door ajar.	Ensure doors are closed when not in use. Avoid opening doors for long periods of time.
	Evaporator coil iced over.	Unplug unit and allow coil to defrost. Make sure thermostat is not set too cold. Ensure that door gasket(s) are sealing properly.

For service call 1-800-465-0234.

Controller Instructions

Digital controller model: PJEZ for cooler



Dimensioni (mm) / Dimensions (mm)

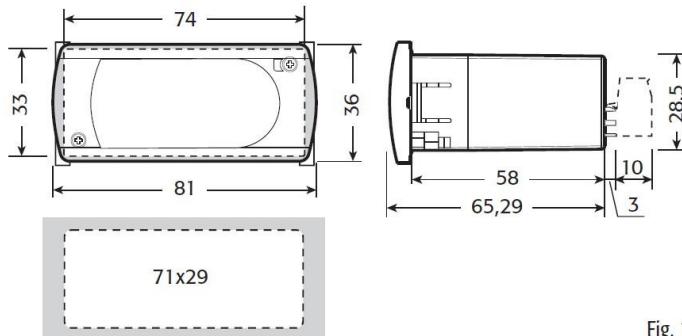


Fig. 1

Display and functions

During normal operation, the controller displays the value of the probe set using parameter/4(=1 ambient probe, default, = 2 second probe, = 3 third probe). In addition, the display has LEDs that indicate the activation of the control functions (see Table 1), while the 3 buttons can be used to activate/deactivate some of the functions (see Table 2).

LED's and Associated Functions (Table 1)

Icon	Function	Normal Operation			Start Up
		ON	OFF	Blink	
compressor	Compressor	On	Off	Request	ON
fan	Fan	On	Off	Request	ON
defrost	Defrost	On	Off	Request	ON
AUX	Aux	Output On	Output Off	-	ON
alarm	Alarm	All	No Alarm	-	ON
clock	Clock	RTC fitted and enabled, at least 1 time band set	RTC not fitted or disabled, not even 1 time band set	-	ON if RTC fitted

Controller Instructions

Table of Functions activated by the buttons - Models S, X, Y, C (Table 2)

Button		Normal Operation		Start Up	
		Pressing the Button Alone	Pressed Together		
△ 	Up ON/OFF	More than 3 sec: toggle ON/OFF	Start/Stop continuous cycle	-	
▽ 	Down Defrost	More than 3 sec: start/stop defrost		Pressed together Start parameter reset procedure	For 1 sec. display firmware vers. code
	Set Mute	- 1 sec.: display/set the set point. - more than 3 secs.: access parameter setting menu (enter password) - mute audible alarm (buzzer)	-		For 1 sec. RESET current EZY set

Setting the set point (desired temperature)

- press **SET** for 1 sec, the set value will start flashing after a few moments;
- increase or decrease the value using **UP** or **DOWN**;
- press **SET** to confirm the new value.

Switching the device ON/OFF

Press **UP** for more than 3 sec. The control and defrost algorithms are now disabled and the Instrument displays the message "OFF" alternating with the temperature read by the set probe

Manual defrost

Press for **DOWN** more than 3 sec (the defrost starts only the temperature conditions are valid).

Continuous cycle

Press **UP** and **DOWN** together for more than 3 sec

Access and setting type F (frequent) and type C (configuration) parameters

1. press **SET** for 3 sec (the display will show "PS");
2. • to access the type F and C parameter menu, enter the password "22" using **UP/DOWN**, press **SET** to confirm;
• to access the F parameter menu only, press **SET** (without entering the password);
3. scroll inside the parameter menu using **UP/DOWN**;



Controller Instructions

- to display/set the values of the parameter displayed, press **SET**, then **UP/DOWN** and finally **SET** to confirm the changes (returning to the parameter menu).

To save all the new values and exit the parameter menu, press **SET** for 3 s;


To exit the menu without saving the changed values (exit by timeout) do not press any button for at least 60 s.

REFERENCE

Item Number	Model Number	Description	Manufacturer Model Number
50045	PT-CN-0686-HC	Refrigerated Prep Table 27" / 686mm 110V/60/1 ETL cETLus	SCL1-HC
50046	PT-CN-1194-HC	Refrigerated Prep Table 47" / 1194mm 110V/60/1 ETL cETLus	SCL2-HC
50047	PT-CN-1524-HC	Refrigerated Prep Table 60" / 1524mm 110V/60/1 ETL cETLus	SCL2-60-HC
50048	PT-CN-1778-HC	Refrigerated Prep Table 70" / 1778mm 110V/60/1 ETL cETLus	SCL3-HC
50049	PT-CN-0711-HC	Refrigerated Prep Table Mega 28" / 711mm 110V/60/1 ETL cETLus	SCLM1-HC
50050	PT-CN-1194-H	Refrigerated Prep Table Mega 47" / 1194mm 110V/60/1 ETL cETLus	SCLM2-HC
50051	PT-CN-1537-HC	Refrigerated Prep Table Mega 61" / 1537mm 110V/60/1 ETL cETLus	SCLM2-60-HC

Parts Breakdown

Model PT-CN-0686-HC 50045

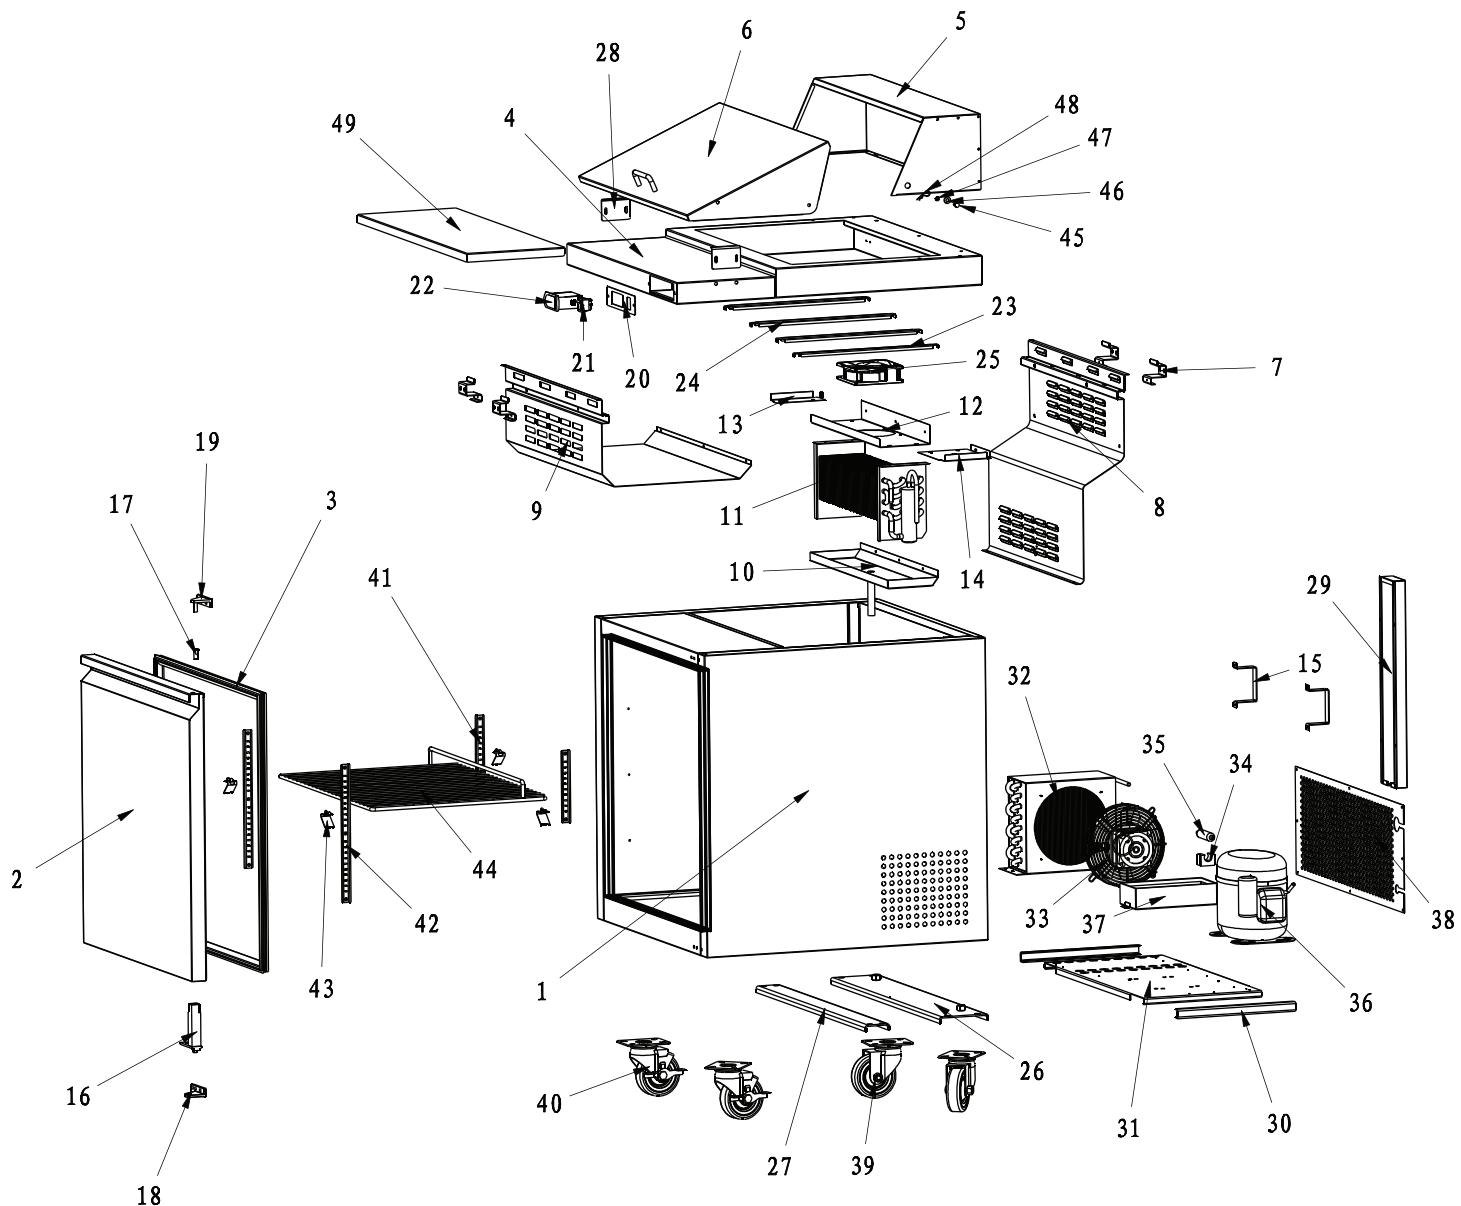




Parts Breakdown

Model PT-CN-0686-HC 50045

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
26744	Cabinet for SCL1-HC	1	28179	Down Right Hinge for SCL1-HC	18	26778	Filter for SCL1-HC	35
26745	Door for SCL1-HC	2	26762	Up Right Hinge for SCL1-HC	19	26183	Compressor for SCL1-HC	36
26746	Door Seal for SCL1-HC	3	26763	Controller Install Panel for SCL1-HC	20	26780	Outside Water Tray for SCL1-HC	37
26747	Top Board for SCL1-HC	4	26192			26781	Diamond Back Cover for SCL1-HC	38
			26485	Power Switch for SCL1-HC	21			
			26764					
26748	Top Back Cover for SCL1-HC	5	26863	Temperature Display for SCL1-HC	22	26246	Castor for SCL1-HC	39
26749	Pan Cover for SCL1-HC	6	26765			26782		
26750	Fan Cover Supporter for SCL1-HC	7	26767	Fan Install Panel for SCL1-HC	24	26247	Castor for SCL1-HC	40
26751	Evaporator Fan Cover for SCL1-HC	8	26768	Evaporator Fan for SCL1-HC	25	26785	K Clip Hanging Bar for SCL1-HC	41
26752	Cover Tray for SCL1-HC	9	26769	Castor Install Panel for SCL1-HC	26	26884	K Clip Hanging Bar for SCL1-HC	42
26753	Inside Water Tray for SCL1-HC	10	26770	Install Panel Supporter for SCL1-HC	27	26788	K Clip for SCL1-HC	43
26754	Evaporator for SCL1-HC	11	26771	Cutting Board Fastener for SCL1-HC	28	26789	Shelf for SCL1-HC	44
26755	Evaporator Fan Install Panel for SCL1-HC	12	26772	Wire Cover for SCL1-HC	29	26790	Dowel for SCL1-HC	45
26756	Evaporator Insulation Board (left) for SCL1-HC	13	26773	Track of Cooling Unit Panel for SCL1-HC	30	26791	Plastic Gasket for SCL1-HC	46
26757	Evaporator Insulation Board (right) for SCL1-HC	14	26774	Cooling Unit Install Panel for SCL1-HC	31	26792	Nut for SCL1-HC	47
26758	Back Bracket for SCL1-HC	15	26775	Condenser for SCL1-HC	32	26793	Split Pin for SCL1-HC	48
26759	Spring Hinge for SCL1-HC	16	26776	Condenser Fan Motor for SCL1-HC	33			
26760	Axial Bush for SCL1-HC	17	26777	Filter Base for SCL1-HC	34			

Parts Breakdown

Model PT-CN-1194-HC 50046

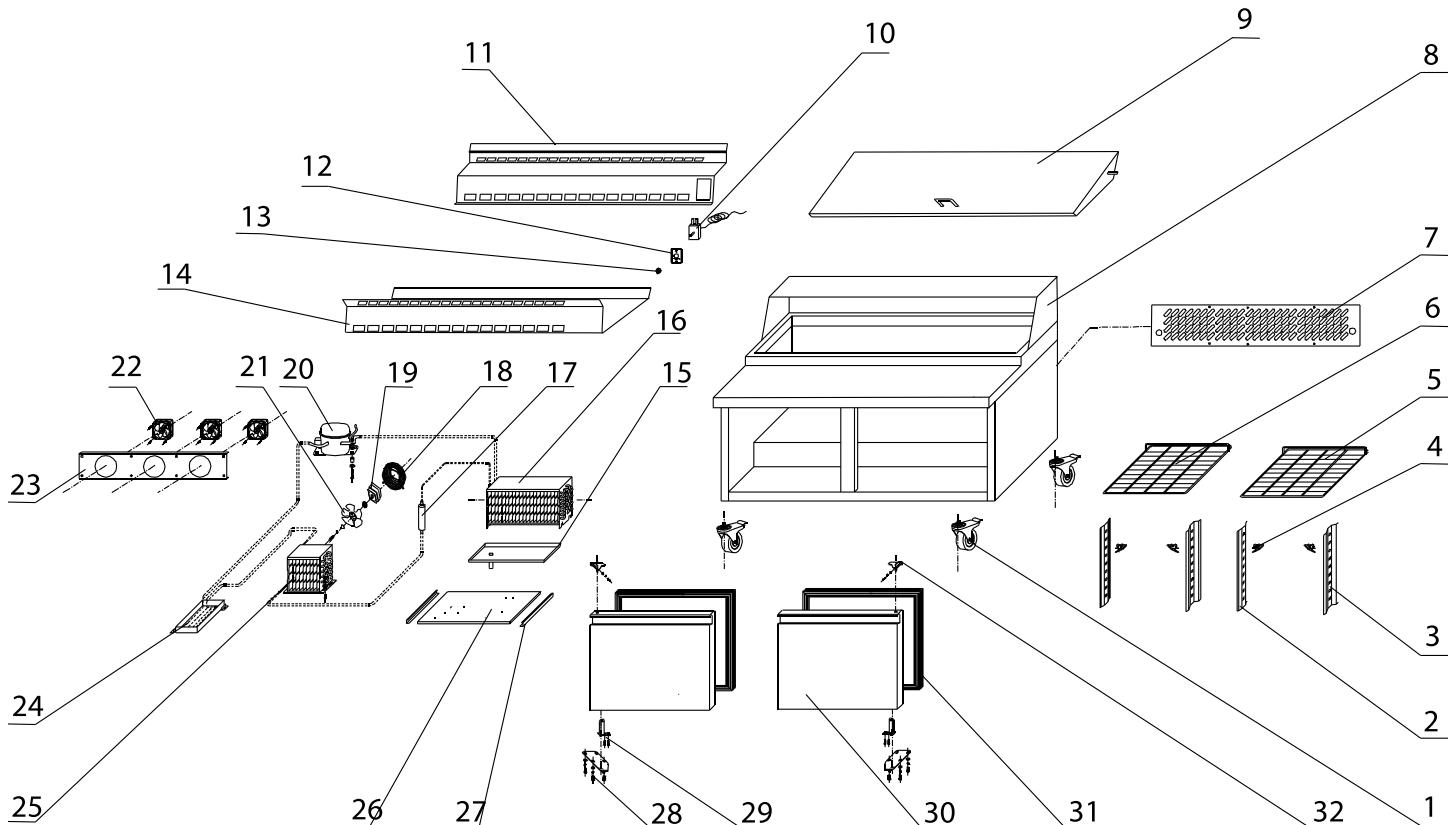




Parts Breakdown

Model PT-CN-1194-HC 50046

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
26246	Castor for SCL2-HC	1	26192	Temperature Controller Knob for SCL2-HC	13	26817	Condenser for SCL2-HC	25
26794	Right K Strip for SCL2-HC	2	26806	Air Director for SCL2-HC	14	26818	Installing Panel for SCL2-HC	26
26795	Left K Strip for SCL2-HC	3	26807	Evaporator Tray for SCL2-HC	15	26819	Installing Panel Bracket for SCL2-HC	27
26884	K Clip for SCL2-HC	4	26955	Evaporator for SCL2-HC	16	26820	Down Hinge Mount Plate for SCL2-HC	28
26797	Right Shelf for SCL2-HC	5	26809	Dry Filter for SCL2-HC	17	26821	Self-Close Hinge for SCL2-HC	29
26798	Left Shelf for SCL2-HC	6	26810	Motor Net Cover for SCL2-HC	18	37884	Left Door for SCL2-HC	30
26798	Diamond Shaped Net-Cover for SCL2-HC	7	26811	Condenser Fan Motor for SCL2-HC	19	26822	Right Door for SCL2-HC	30
26800	Cabinet for SCL2-HC	8	26670	Compressor for SCL2-HC	20	24325	Door Seal for SCL2-HC	31
26801	Pan Cover for SCL2-HC	9	26813	Fan for SCL2-HC	21	26762	Upper Hinges for SCL2-HC	32
27185	Temperature Controller for SCL2-HC	10	26711	Evaporator Fan Motor for SCL2-HC	22	14817	Relay Overload for SCL2-HC	33
26803	Evaporator Fan Cover for SCL2-HC	11	26815	Fan Install Panel for SCL2-HC	23	14818	Capacitor for SCL2-HC	34
26804	Control Panel for SCL2-HC	12	26816	Outside Water Tray for SCL2-HC	24	14820	Starter Kit for Compressor for SCL2-HC	35

Parts Breakdown

Model PT-CN-1524-HC 50047

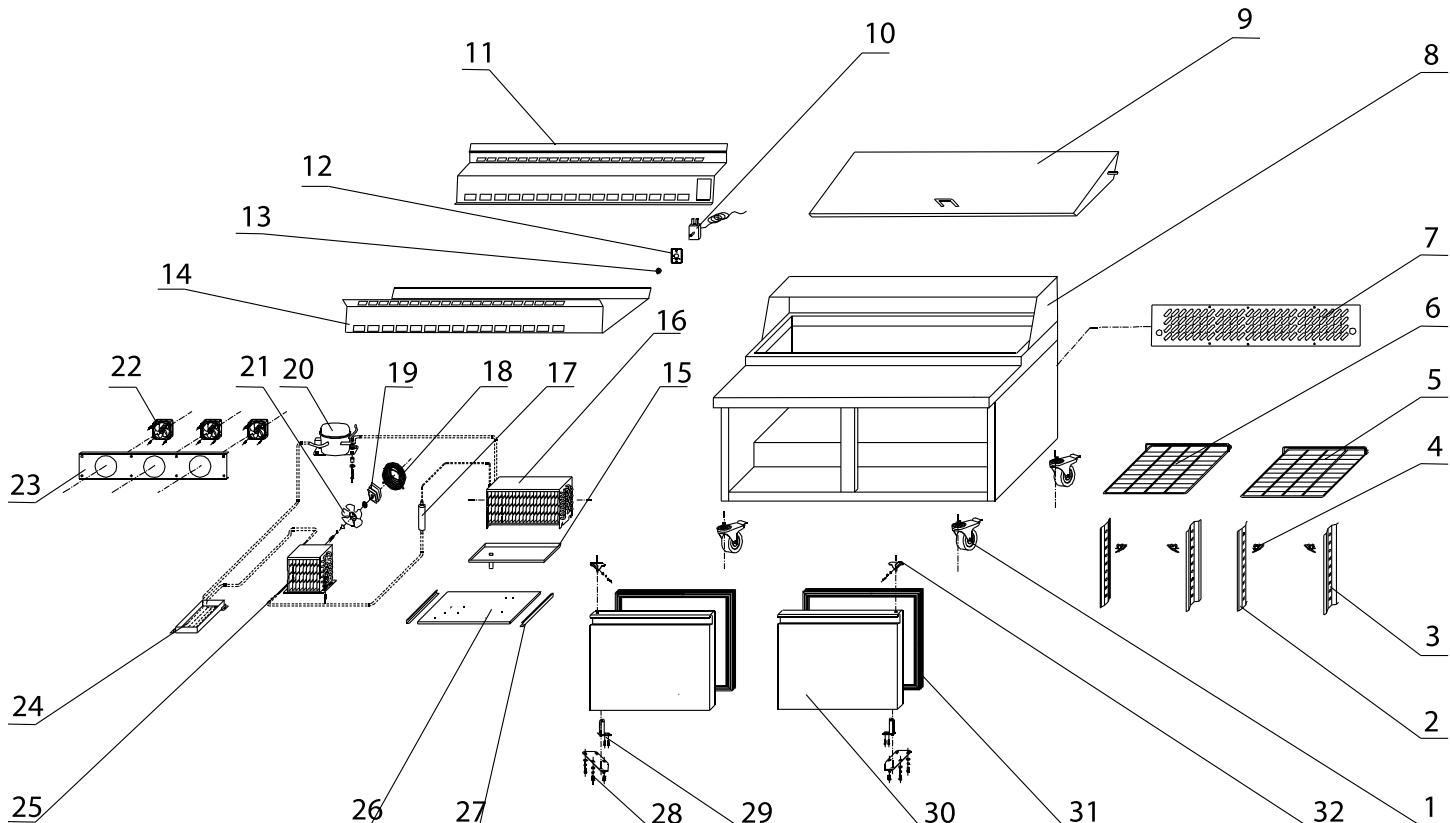




Parts Breakdown

Model PT-CN-1524-HC 50047

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
26246 26891	Castor for SCL2-60-HC	1	26902	Control Panel for SCL2-60-HC	12	26913	Fan Install Panel for SCL2-60-HC	23
26892	Right K Strip for SCL2-60-HC	2	26903	Power Switch for SCL2-60-HC	13	26914	Outside Water Tray for SCL2-60-HC	24
26893	Left K Strip for SCL2-60-HC	3	26904	Air Director for SCL2-60-HC	14	26915	Condenser for SCL2-60-HC	25
26884 26894	K Clip for SCL2-60-HC	4	26905	Evaporator Tray for SCL2-60-HC	15	26916	Installing Panel for SCL2-60-HC	26
26895	Right Shelf for SCL2-60-HC	5	26906	Evaporator for SCL2-60-HC	16	26917	Installing Panel Bracket for SCL2-60-HC	27
26896	Left Shelf for SCL2-60-HC	6	26907	Dry Filter for SCL2-60-HC	17	26918	Down Hinge Mount Plate for SCL2-60-HC	28
26897	Diamond Shaped Net-Cover for SCL2-60-HC	7	26908	Motor Net Cover for SCL2-60-HC	18	26919	Self-Close Hinge for SCL2-60-HC	29
26898	Cabinet for SCL2-60-HC	8	26909	Condenser Fan Motor for SCL2-60-HC	19	26920	Door for SCL2-60-HC	30
26899	Pan Cover for SCL2-60-HC	9	26670 26910	Compressor for SCL2-60-HC	20	26921	Door Seal for SCL2-60-HC	31
26900 27185	Temperature Controller for SCL2-60-HC	10	26911	Fan for SCL2-60-HC	21	26762 26922	Upper Hinges for SCL2-60-HC	32
26901	Evaporator Fan Cover for SCL2-60-HC	11	26711 26912	Evaporator Fan Motor for SCL2-60-HC	22			

Parts Breakdown

Model PT-CN-1778-HC 50048

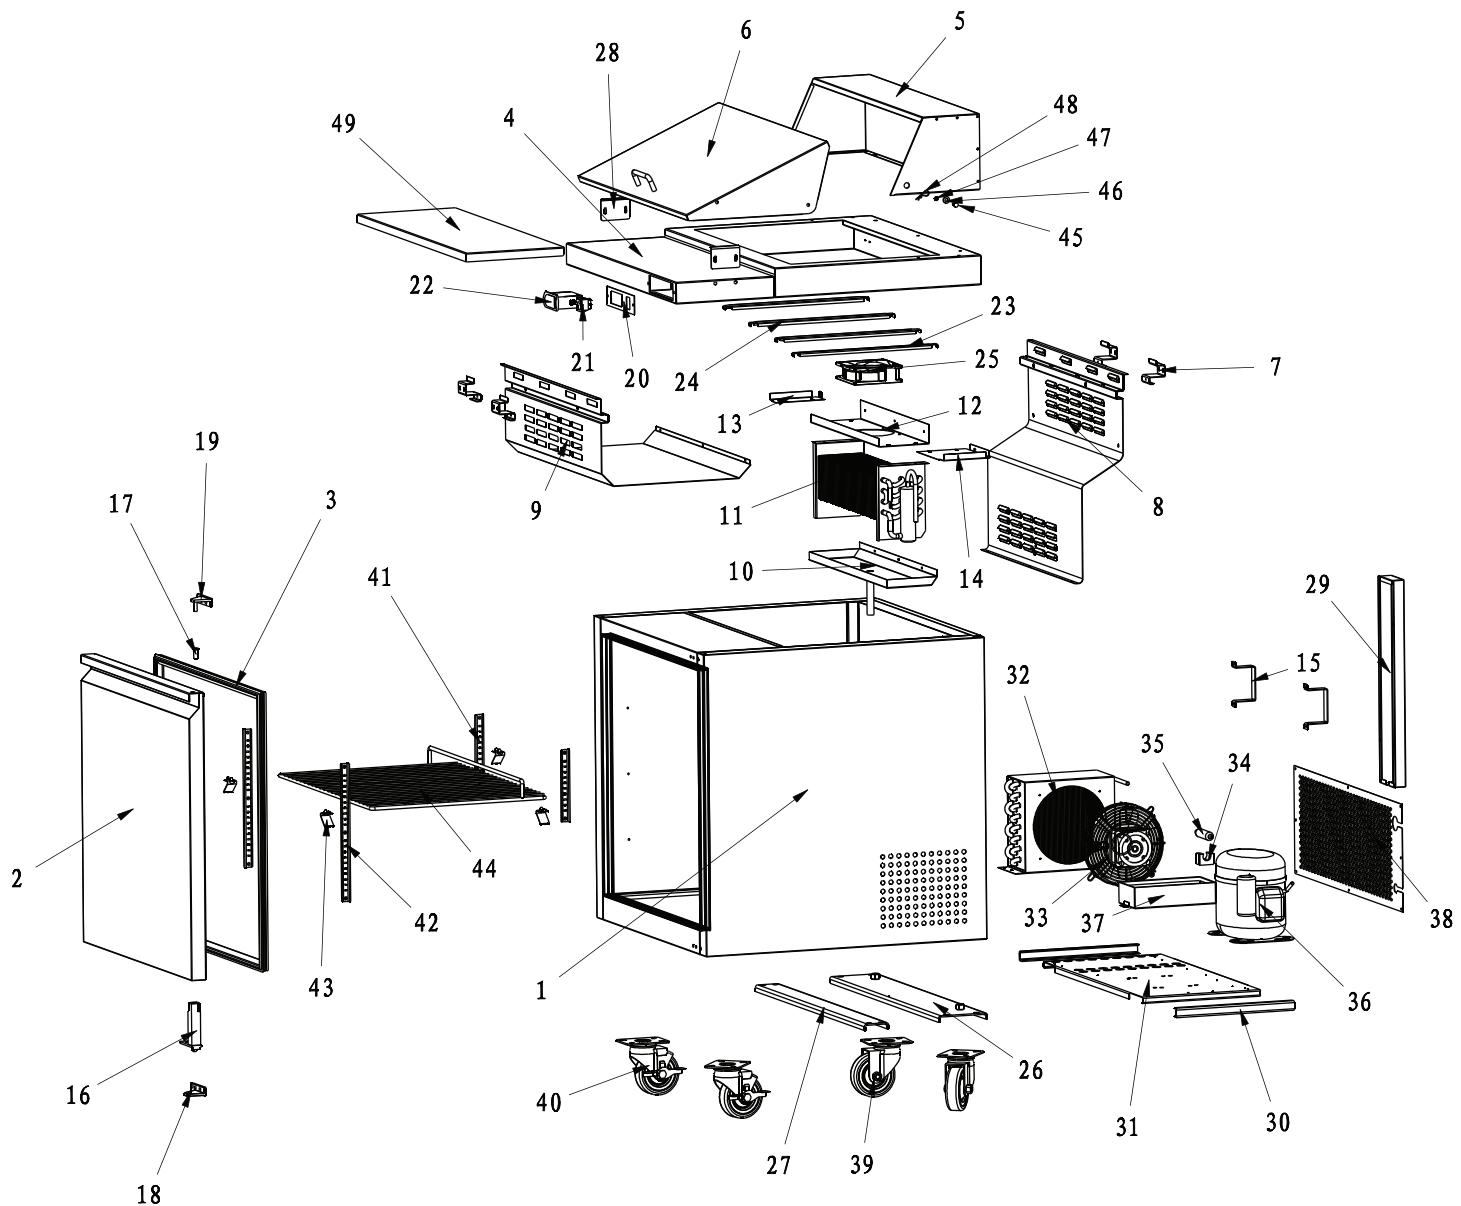




Parts Breakdown

Model PT-CN-1778-HC 50048

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
26842	Cabinet for SCL3-HC	1	26859	Down Right Hinge for SCL3-HC	18	26876	Filter for SCL3-HC	35
26843	Door for SCL3-HC	2	26860	Up Right Hinge for SCL3-HC	19	26877	Compressor for SCL3-HC	36
26844	Door Seal for SCL3-HC	3	26861	Controller Install Panel for SCL3-HC	20	26878	Outside Water Tray for SCL3-HC	37
26845	Top Board for SCL3-HC	4	26192			26879	Diamond Back Cover for SCL3-HC	38
			26485	Power Switch for SCL3-HC	21			
			26862					
26846	Top Back Cover for SCL3-HC	5	26863	Temperature Display for SCL3-HC	22	26246 26880	Castor for SCL3-HC	39
26847	Pan Cover for SCL3-HC	6	26864	Pan Divider Small for SCL3-HC	23	26247 26881	Castor for SCL3-HC	40
26848	Fan Cover Supporter for SCL3-HC	7	26865	Pan Divider Large for SCL3-HC	24	26882	K Clip Hanging Bar for SCL3-HC	41
26849	Evaporator Fan Cover for SCL3-HC	8	26866	Evaporator Fan for SCL3-HC	25	26883	K Clip Hanging Bar for SCL3-HC	42
26850	Cover Tray for SCL3-HC	9	26867	Castor Install Panel for SCL3-HC	26	26884	K Clip for SCL3-HC	43
26851	Inside Water Tray for SCL3-HC	10	26868	Install Panel Supporter for SCL3-HC	27	26885	Shelf for SCL3-HC	44
26852	Evaporator for SCL3-HC	11	26869	Cutting Board Fastener for SCL3-HC	28	26886	Dowel for SCL3-HC	45
26853	Evaporator Fan Install Panel for SCL3-HC	12	26870	Wire Cover for SCL3-HC	29	26887	Plastic Gasket for SCL3-HC	46
26854	Evaporator Insulation Board (left) for SCL3-HC	13	26871	Track of Cooling Unit Panel for SCL3-HC	30	26888	Nut for SCL3-HC	47
26855	Evaporator Insulation Board (right) for SCL3-HC	14	26872	Cooling Unit Install Panel for SCL3-HC	31	26889	Split Pin for SCL3-HC	48
26856	Back Bracket for SCL3-HC	15	26873	Condenser for SCL3-HC	32	26890	Cutting Board for SCL3-HC	49
26857	Spring Hinge for SCL3-HC	16	26874	Condenser Fan Motor for SCL3-HC	33			
26858	Axial Bush for SCL3-HC	17	26875	Filter Base for SCL3-HC	34			

Parts Breakdown

Model PT-CN-0711-HC 50049

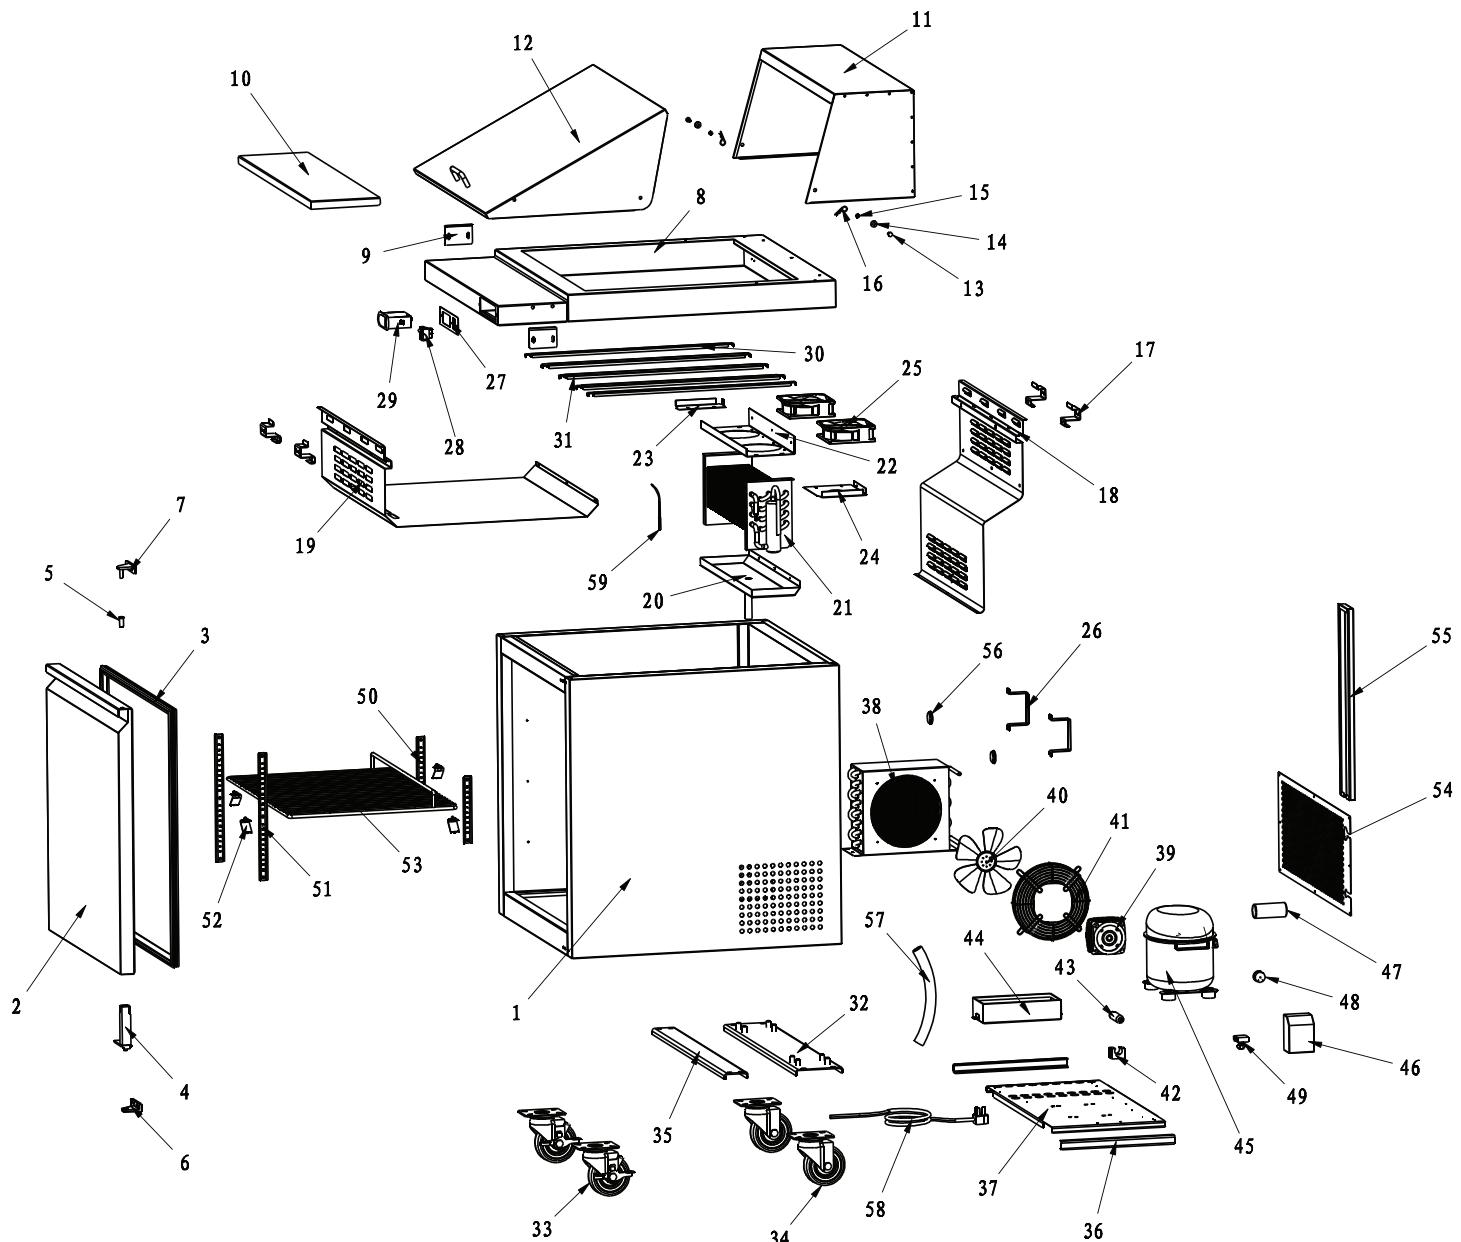




Parts Breakdown

Model PT-CN-0711-HC 50049

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
28113	Cabinet for SCLM1-HC	1	28133	Evaporator for SCLM1-HC	21	28153	Condenser Fan Cover for SCLM1-HC	41
28114	Door for SCLM1-HC	2	28134	Mounting Plate of Evaporator Fan for SCLM1-HC	22	28154	Filter Bracket for SCLM1-HC	42
28115	Door Seal for SCLM1-HC	3	28135	Left Clapboard of Evaporator for SCLM1-HC	23	28155	Filter for SCLM1-HC	43
28116	Spring Hinge for SCLM1-HC	4	28136	Right Clapboard of Evaporator for SCLM1-HC	24	28156	Exterior Water Tray for SCLM1-HC	44
28117	Axel Bush for SCLM1-HC	5	26711 28137	Evaporator Fan Motor for SCLM1-HC	25	26183 28157	Compressor for SCLM1-HC	45
28183 28118	Bottom Hinge for SCLM1-HC	6	28138	Back Bracket for SCLM1-HC	26	28158	Wiring Box of Compressor for SCLM1-HC	46
26762 28119	Upper Hinge for SCLM1-HC	7	28139	Controller Mounting Plate for SCLM1-HC	27	28159	Starting Capacitor for SCLM1-HC	47
28120	Top Board for SCLM1-HC	8	26192 26485 28140	Power Switch for SCLM1-HC	28	28160	Overload Protector for SCLM1-HC	48
28121	Fastener of Cutting Board for SCLM1-HC	9	28141	Digital Thermostat for SCLM1-HC	29	28161	Starter for SCLM1-HC	49
28122	Cutting Board for SCLM1-HC	10	28142	Pan Divider for SCLM1-HC	30	28162	Hanger of K Clip - 2 Holes for SCLM1-HC	50
28123	Top Cover for SCLM1-HC	11	28143	Pan Divider for SCLM1-HC	31	28163	Hanger of K Clip - 3 Holes for SCLM1-HC	51
28124	Pan Cover for SCLM1-HC	12	28144	Mounting Plate of Castor for SCLM1-HC	32	26786 28164	K Clip for SCLM1-HC	52
28125	Dowel for SCLM1-HC	13	26246 28145	Castor with Brake for SCLM1-HC	33	26787 28165	Shelf for SCLM1-HC	53
28126	Plastic Gasket for SCLM1-HC	14	26247 28146	Castor without Brake for SCLM1-HC	34	28166	Back Cover for SCLM1-HC	54
28127	Nut for SCLM1-HC	15	28147	Bracket of Mounting Plate for SCLM1-HC	35	28167	Protecting Cover of Wire for SCLM1-HC	55
28128	Pin for SCLM1-HC	16	28148	Track of Compressor Mounting Plate for SCLM1-HC	36	28168	Lid of Foaming Hole for SCLM1-HC	56
28129	Bracket of Evaporator Cover for SCLM1-HC	17	28149	Compressor Mounting Plate for SCLM1-HC	37	28169	Drain Pipe for SCLM1-HC	57
28130	Evaporator Cover for SCLM1-HC	18	28150	Condenser for SCLM1-HC	38	28170	Power Cord for SCLM1-HC	58
28131	Cover Tray for SCLM1-HC	19	28151	Condenser Fan Motor for SCLM1-HC	39	28171	Temperature Sensor for SCLM1-HC	59
28132	Interior Water Tray for SCLM1-HC	20	28152	Fan for SCLM1-HC	40			

Parts Breakdown

Model PT-CN-1194-H 50050

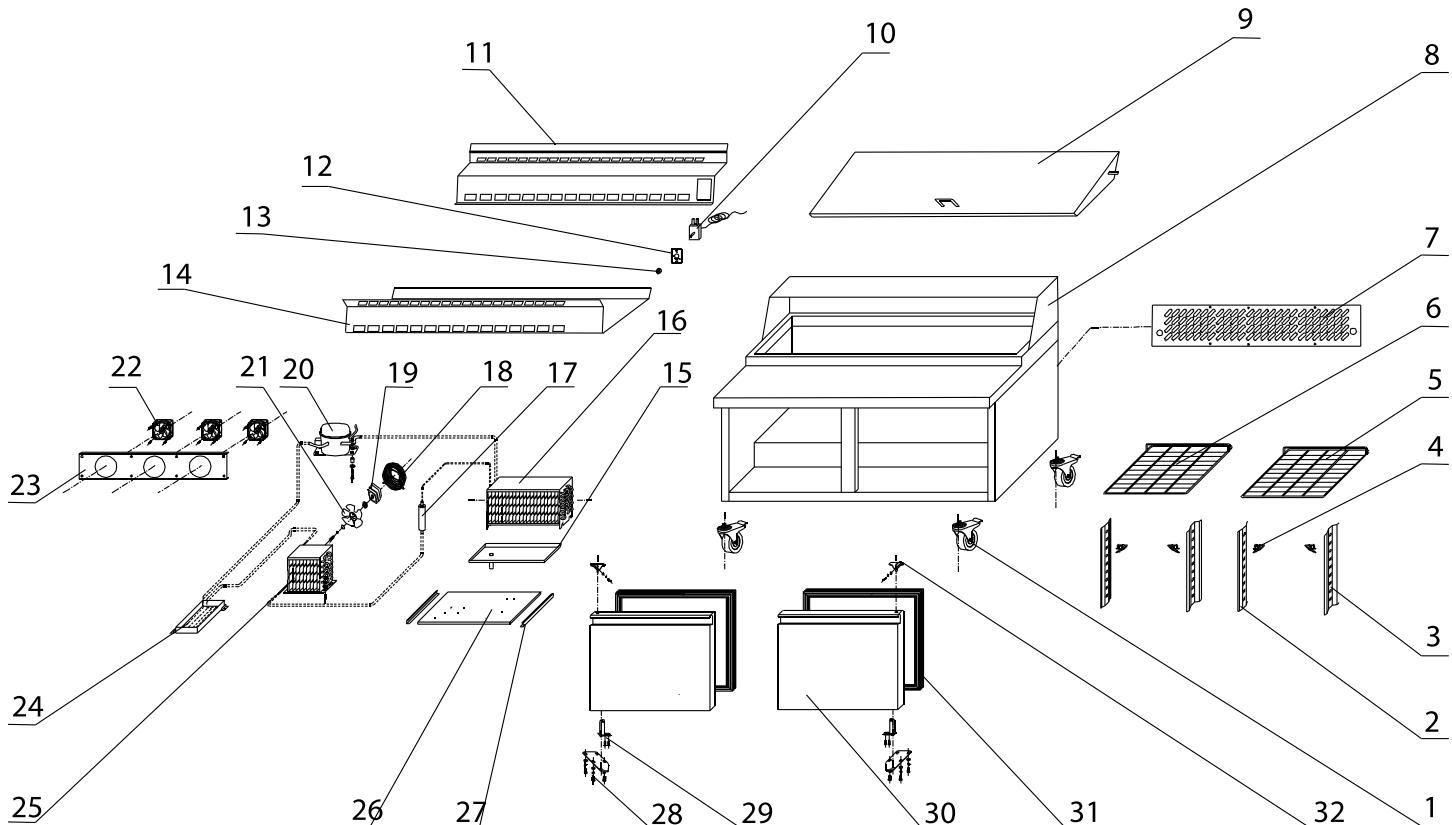




Parts Breakdown

Model PT-CN-1194-H 50050

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
26246 26940	Castor for SCLM2-HC	1	26951	Control Panel for SCLM2-HC	12	26962	Fan Install Panel for SCLM2-HC	23
26941	Right K Strip for SCLM2-HC	2	26952	Power Switch for SCLM2-HC	13	26963	Outside Water Tray for SCLM2-HC	24
26942	Left K Strip for SCLM2-HC	3	26953	Air Director for SCLM2-HC	14	26964	Condenser for SCLM2-HC	25
26796 26943	K Clip for SCLM2-HC	4	26954	Evaporator Tray for SCLM2-HC	15	26965	Installing Panel for SCLM2-HC	26
26797 26944	Right Shelf for SCLM2-HC	5	26955	Evaporator for SCLM2-HC	16	26966	Installing Panel Bracket for SCLM2-HC	27
26798 26945	Left Shelf for SCLM2-HC	6	26956	Dry Filter for SCLM2-HC	17	26967	Down Hinge Mount Plate for SCLM2-HC	28
26946	Diamond Shaped Net-Cover for SCLM2-HC	7	26957	Motor Net Cover for SCLM2-HC	18	26968	Self-Close Hinge for SCLM2-HC	29
26947	Cabinet for SCLM2-HC	8	26958	Condenser Fan Motor for SCLM2-HC	19	26969	Door for SCLM2-HC	30
26948	Pan Cover for SCLM2-HC	9	26670 26959	Compressor for SCLM2-HC	20	26970	Door Seal for SCLM2-HC	31
26949 27185	Temperature Controller for SCLM2-HC	10	26960	Fan for SCLM2-HC	21	26762 26971	Upper Hinges for SCLM2-HC	32
26950	Evaporator Fan Cover for SCLM2-HC	11	26711 26961	Evaporator Fan Motor for SCLM2-HC	22			

Parts Breakdown

Model PT-CN-1537-HC 50051

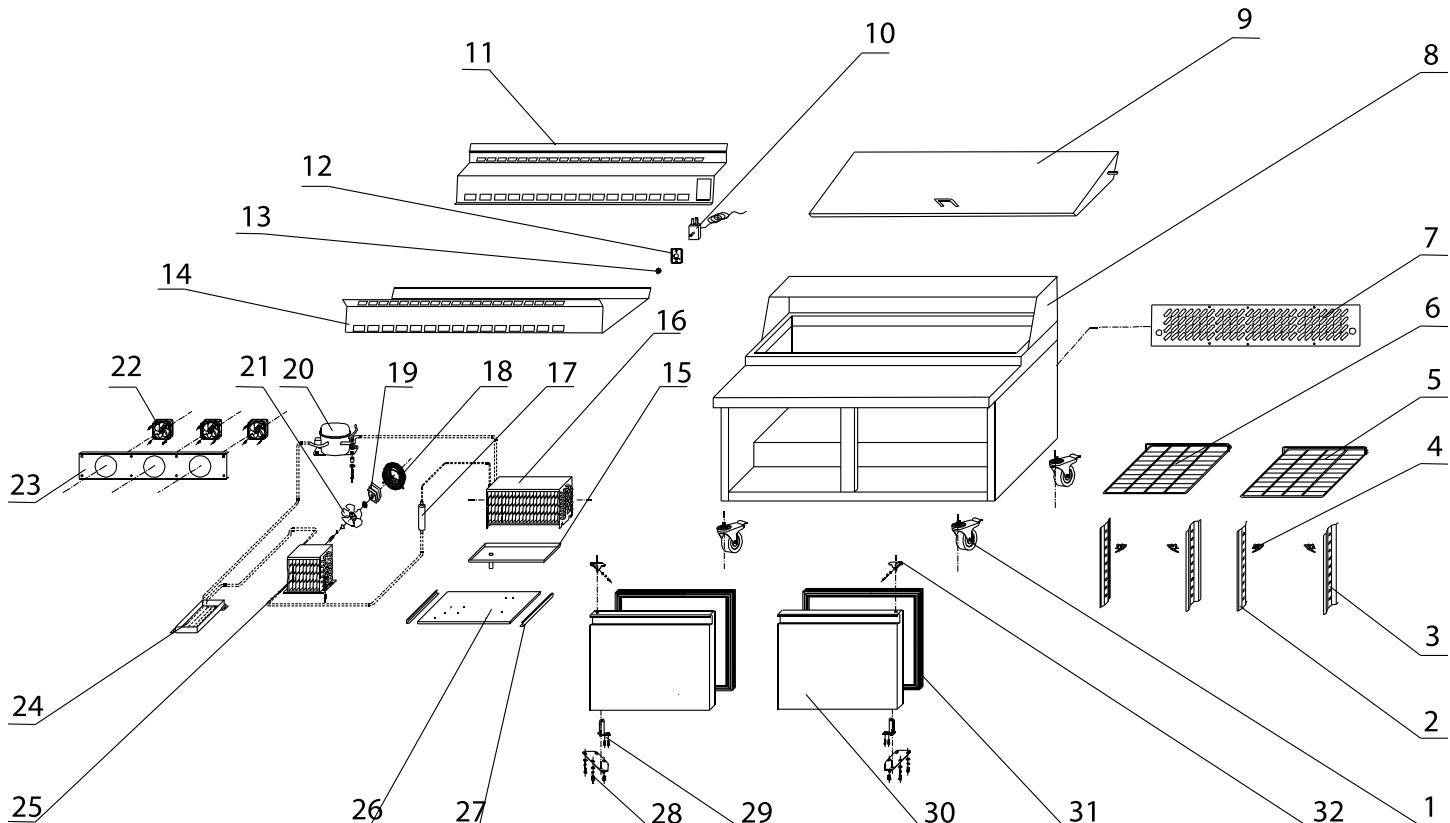




Parts Breakdown

Model PT-CN-1537-HC 50051

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
26246 26989	Castor for SCLM2-60-HC	1	27000	Control Panel for SCLM2-60-HC	12	27011	Fan Install Panel for SCLM2-60-HC	23
26990	Right K Strip for SCLM2-60-HC	2	27001	Power Switch for SCLM2-60-HC	13	27012	Outside Water Tray for SCLM2-60-HC	24
26991	Left K Strip for SCLM2-60-HC	3	27002	Air Director for SCLM2-60-HC	14	27013	Condenser for SCLM2-60-HC	25
26894 26992	K Clip for SCLM2-60-HC	4	27003	Evaporator Tray for SCLM2-60-HC	15	27014	Installing Panel for SCLM2-60-HC	26
26895 26993	Right Shelf for SCLM2-60-HC	5	27004	Evaporator for SCLM2-60-HC	16	27015	Installing Panel Bracket for SCLM2-60-HC	27
26896 26994	Left Shelf for SCLM2-60-HC	6	27005	Dry Filter for SCLM2-60-HC	17	27016	Down Hinge Mount Plate for SCLM2-60-HC	28
26995	Diamond Shaped Net-Cover for SCLM2-60-HC	7	27006	Motor Net Cover for SCLM2-60-HC	18	27017	Self-Close Hinge for SCLM2-60-HC	29
26996	Cabinet for SCLM2-60-HC	8	27007	Condenser Fan Motor for SCLM2-60-HC	19	27018	Door for SCLM2-60-HC	30
26997	Pan Cover for SCLM2-60-HC	9	26670 27008	Compressor for SCLM2-60-HC	20	27019	Door Seal for SCLM2-60-HC	31
26998	Temperature Controller for SCLM2-60-HC	10	27009	Fan for SCLM2-60-HC	21	26762 27020	Upper Hinges for SCLM2-60-HC	32
26999	Evaporator Fan Cover for SCLM2-60-HC	11	26711 27010	Evaporator Fan Motor for SCLM2-60-HC	22			


Electrical Schematics

Model PT-CN-0686-HC 50045

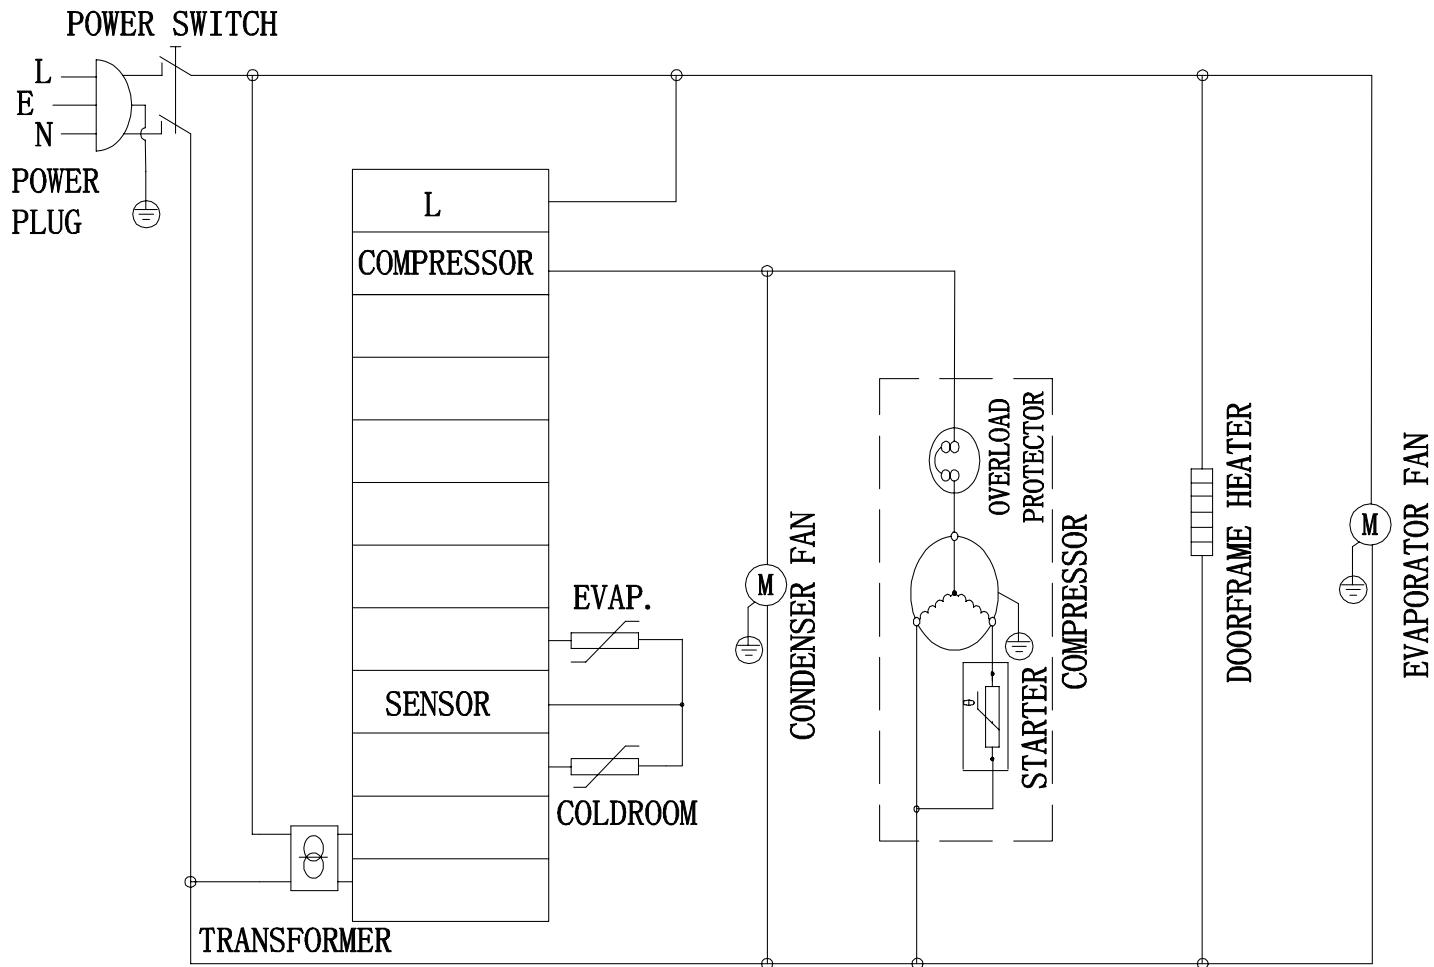


Electrical Schematics

Model PT-CN-1194-HC 50046

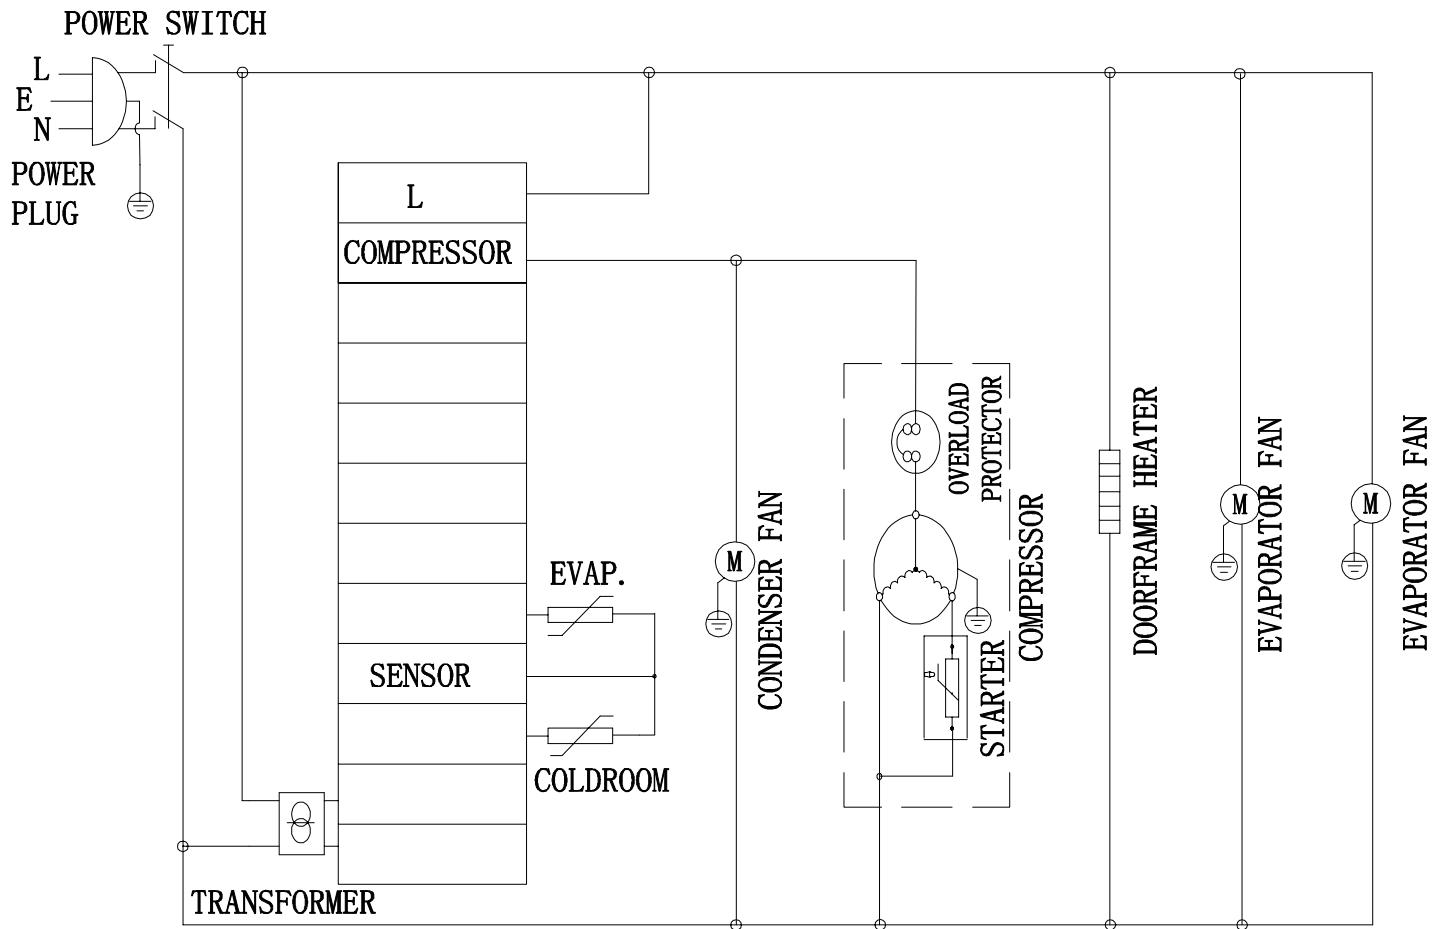


Electrical Schematics

Model PT-CN-1524-HC 50047

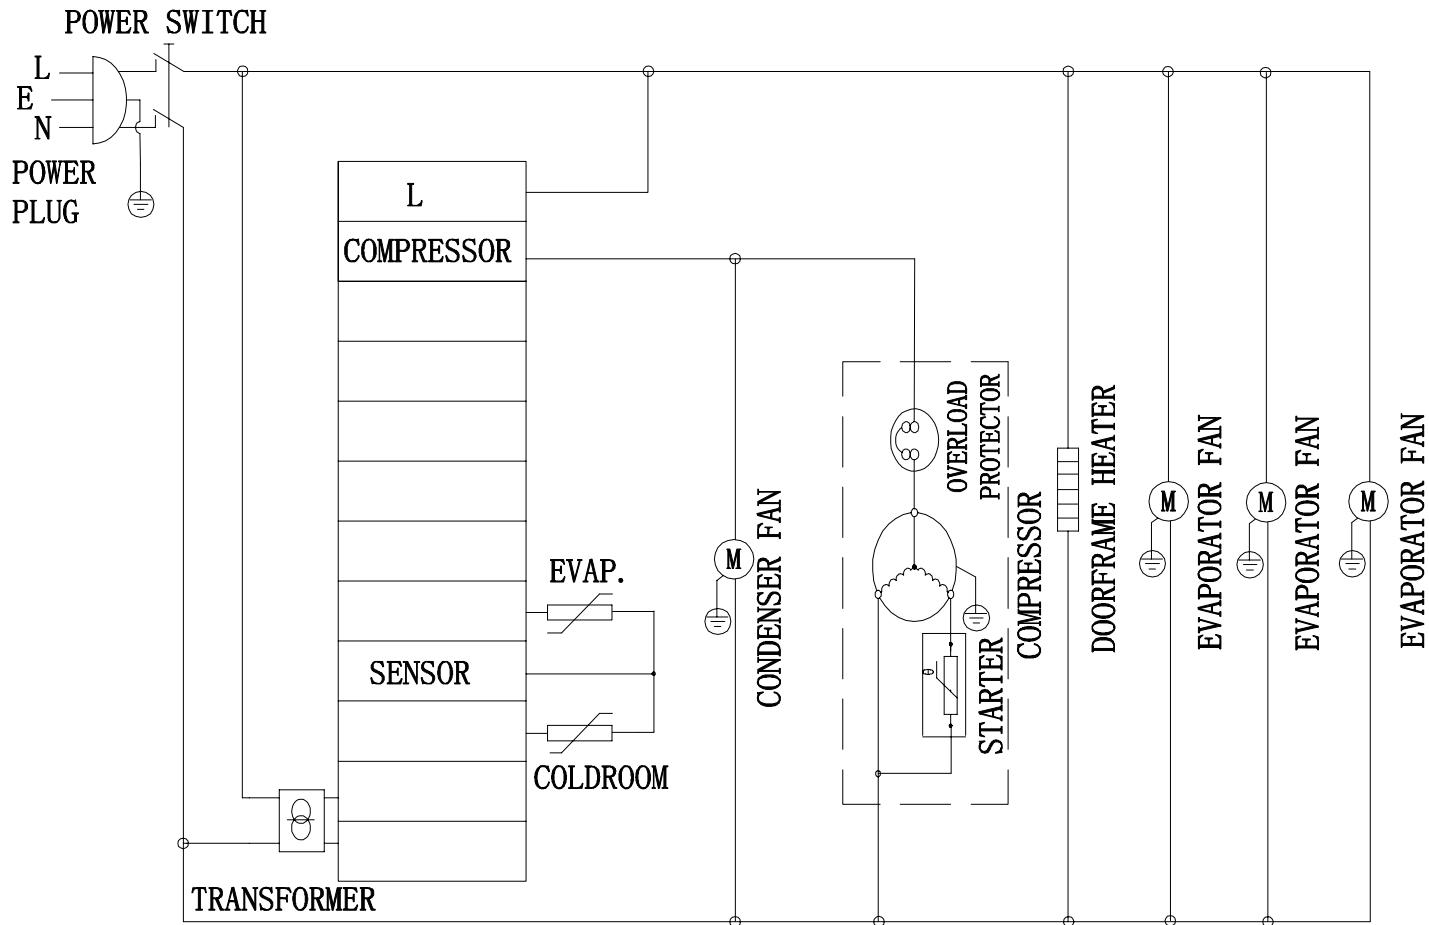


Electrical Schematics

Model PT-CN-1778-HC 50048

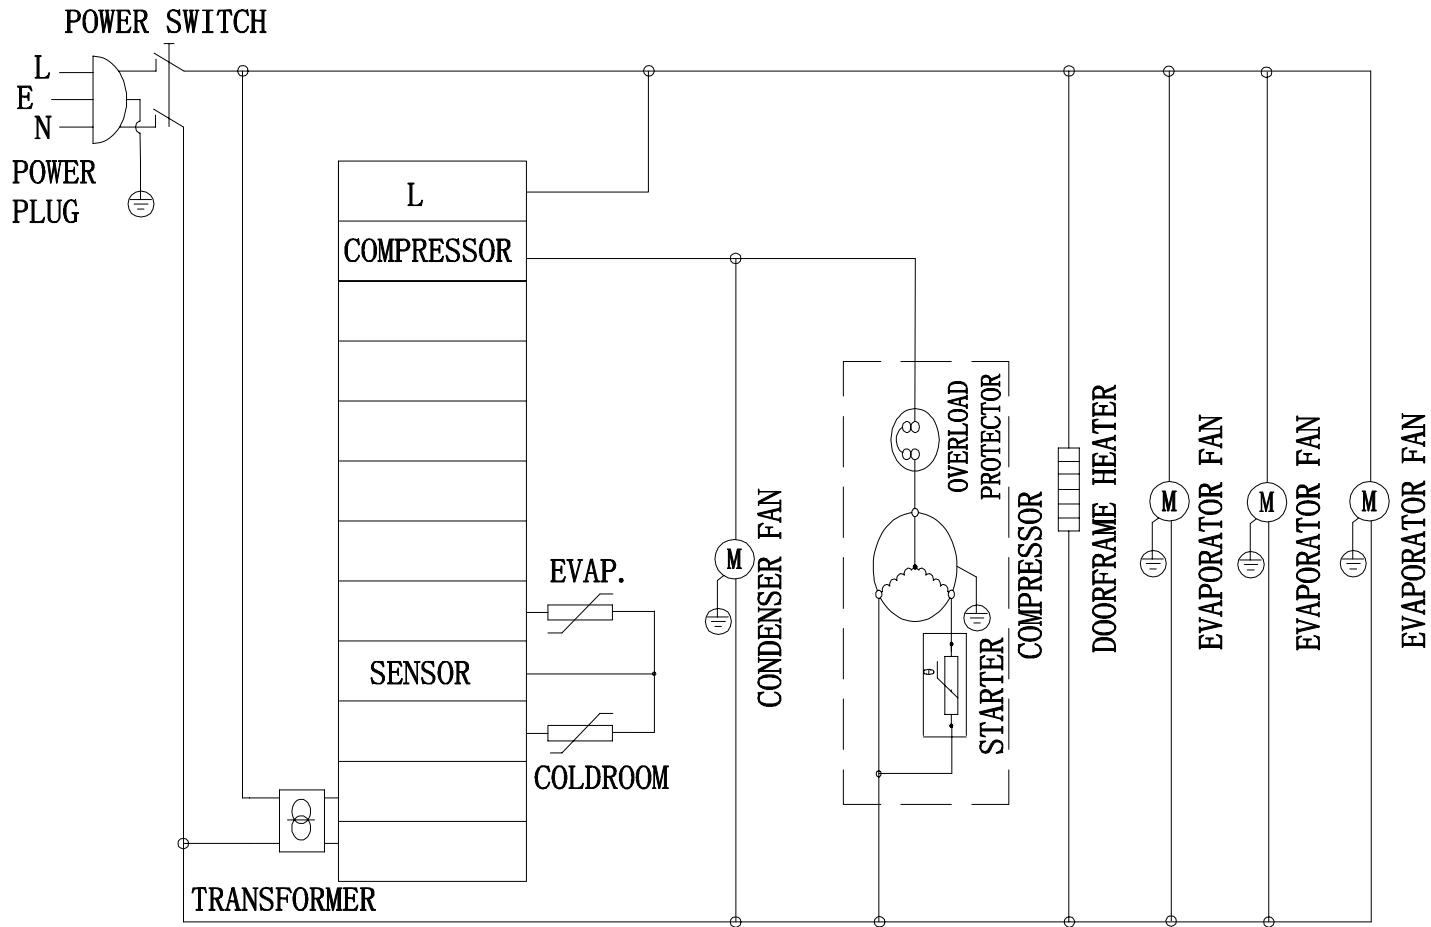


Electrical Schematics

Model PT-CN-0711-HC 50049

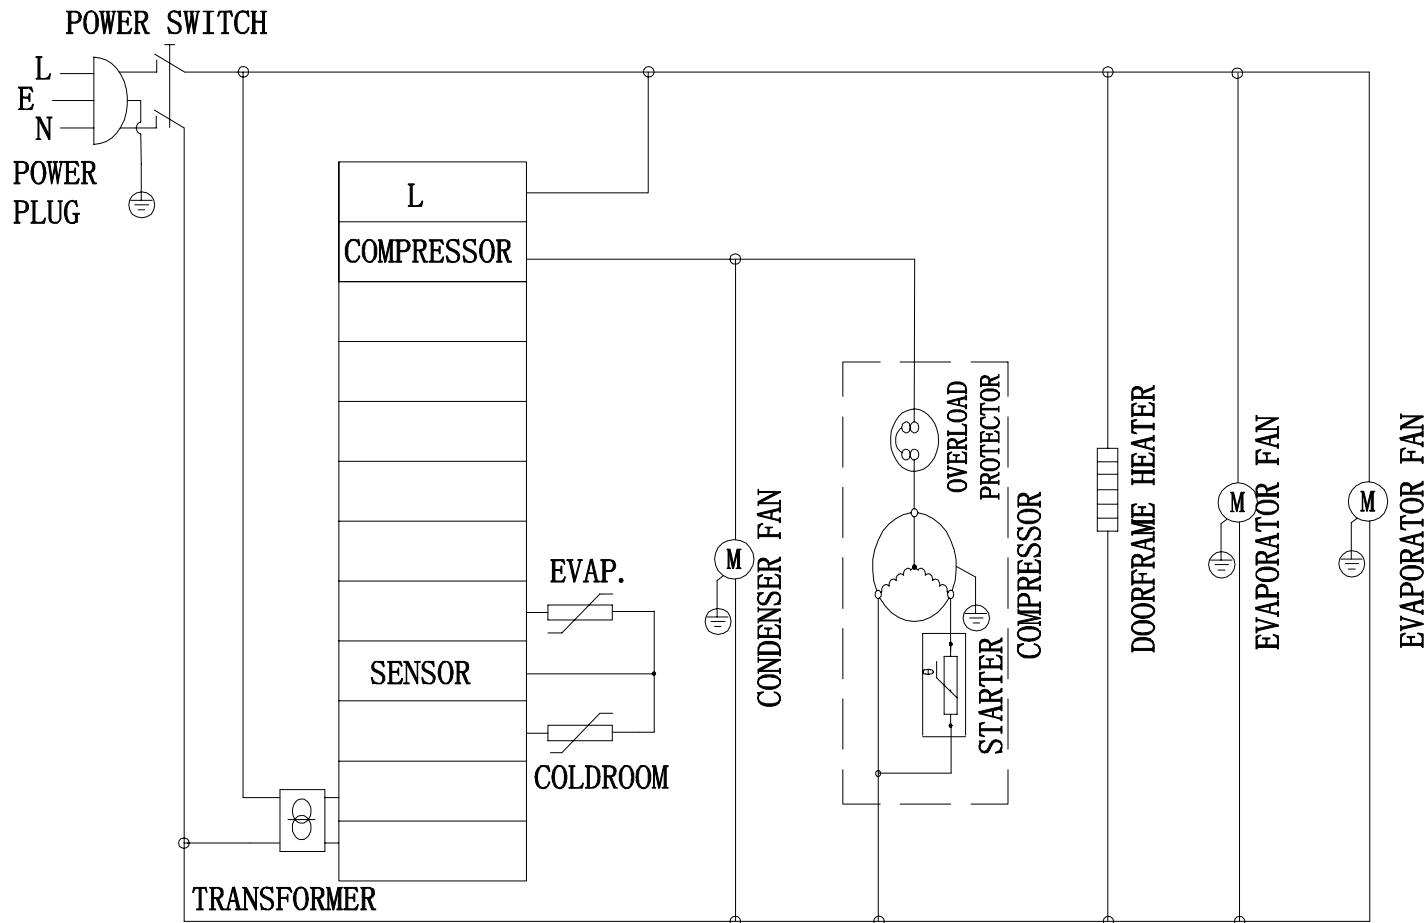


Electrical Schematics

Model PT-CN-1194-H 50050

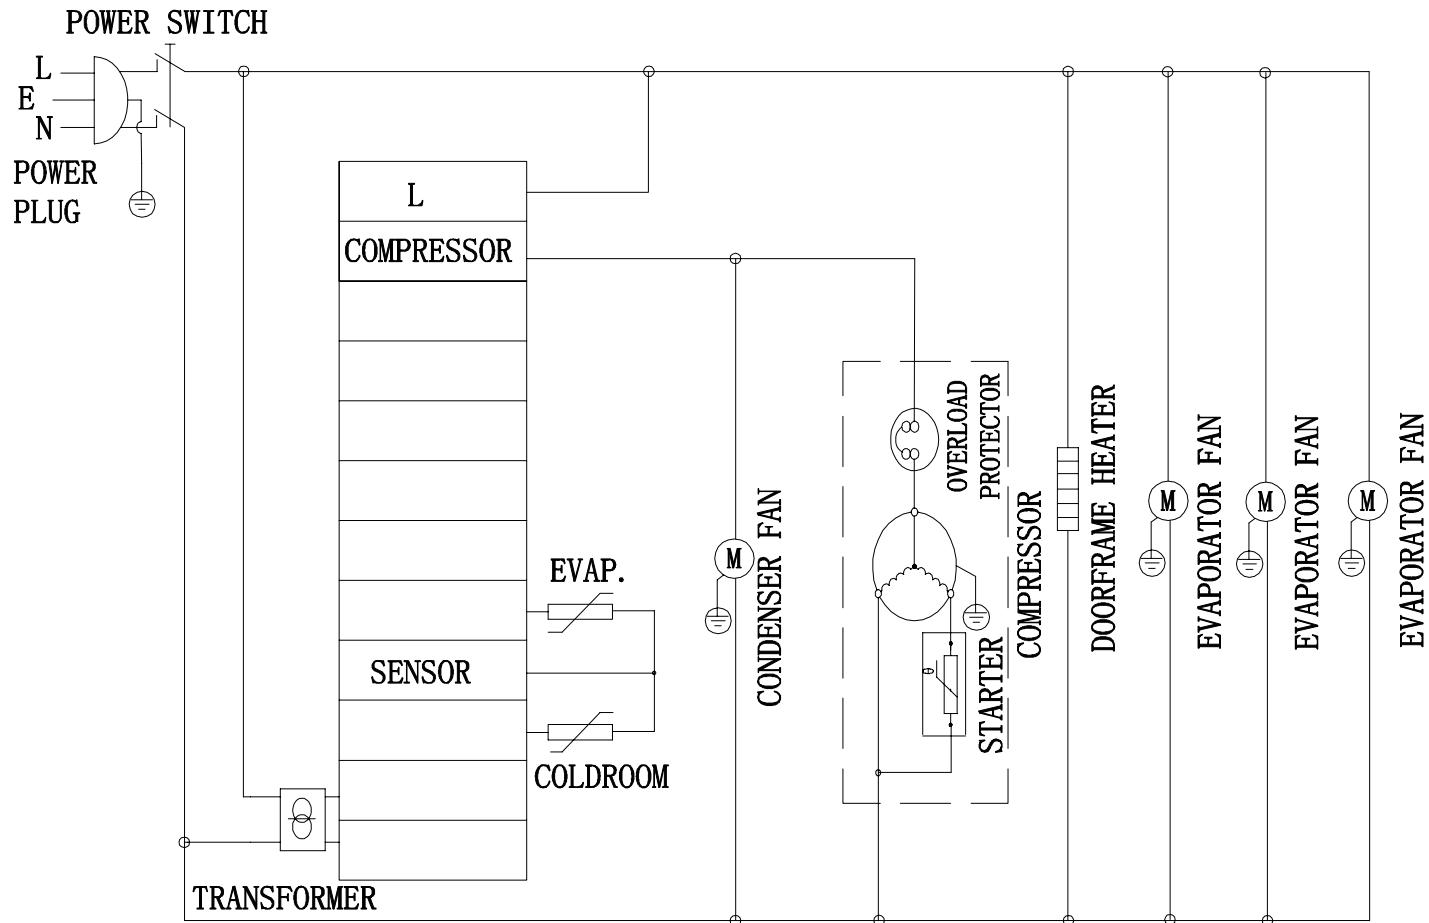

Electrical Schematics

Model PT-CN-1537-HC 50051

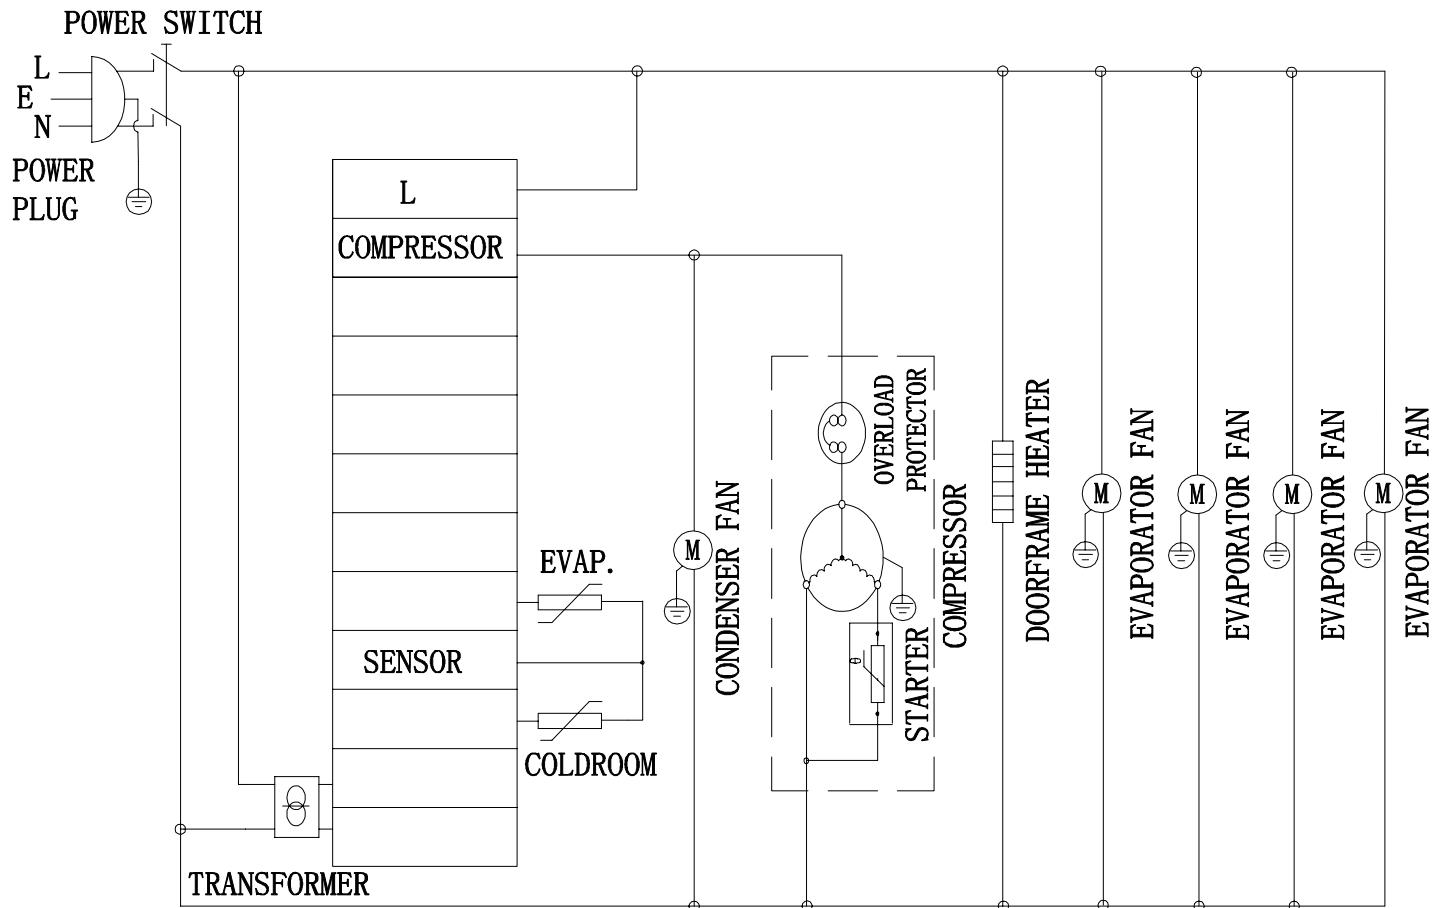



Warranty Registration

Thank you for purchasing an Omcan product. To register your warranty for this product, complete the information below, tear off the card at the perforation and then send to the address specified below. You can also register online by visiting:

Merci d'avoir acheté un produit Omcan. Pour enregistrer votre garantie pour ce produit, complétez les informations ci-dessous, détachez la carte au niveau de la perforation, puis l'envoyer à l'adresse spécifiée ci-dessous. Vous pouvez également vous inscrire en ligne en visitant:

Gracias por comprar un producto Omcan usted. Para registrar su garantía para este producto, complete la información a continuación, cortar la tarjeta en la perforación y luego enviarlo a la dirección indicada a continuación. También puede registrarse en línea en:

www.omcan.com/warrantyregistration.html

For mailing in Canada

Pour postale au Canada

Por correo en Canadá

For mailing in the US

Pour diffusion aux États-Unis

Por correo en los EE.UU.

OMCAN

PRODUCT WARRANTY REGISTRATION
3115 Pepper Mill Court,
Mississauga, Ontario
Canada, L5L 4X5

OMCAN

PRODUCT WARRANTY REGISTRATION
4450 Witmer Industrial Estates, Unit 4,
Niagara Falls, New York
USA, 14305

or email to: service@omcan.com



Purchaser's Information

Name: _____ Company Name: _____

Address: _____ Telephone: _____

City: _____ Province or State: _____ Postal or Zip: _____ Email Address: _____

Country: _____ Type of Company: _____

Restaurant Bakery Deli

Butcher Supermarket Caterer

Institution (specify): _____

Other (specify): _____

Dealer from which Purchased: _____

Dealer City: _____ Dealer Province or State: _____

Invoice: _____

Model Name: _____ Model Number: _____ Serial Number: _____

Machine Description: _____

Date of Purchase (MM/DD/YYYY): _____ Date of Installation (MM/DD/YYYY): _____

Would you like to extend the warranty? Yes No

Thank you for choosing Omcan | Merci d'avoir choisi Omcan | Gracias por elegir Omcan



Since 1951 Omcan has grown to become a leading distributor of equipment and supplies to the North American food service industry. Our success over these many years can be attributed to our commitment to strengthen and develop new and existing relationships with our valued customers and manufacturers. Today with partners in North America, Europe, Asia and South America, we continually work to improve and grow the company. We strive to offer customers exceptional value through our qualified local sales and service representatives who provide convenient access to over 3,500 globally sourced products.

Depuis 1951 Omcan a grandi pour devenir un des "leaders" de la distribution des équipements et matériel pour l'industrie des services alimentaires en Amérique du Nord. Notre succès au cours de ces nombreuses années peut être attribué à notre engagement à renforcer et à développer de nouvelles et existantes relations avec nos clients et les fabricants de valeur. Aujourd'hui avec des partenaires en Amérique du Nord, Europe, Asie et Amérique du Sud, nous travaillons continuellement à améliorer et développer l'entreprise. Nous nous efforçons d'offrir à nos clients une valeur exceptionnelle grâce à nos ventes locales qualifiées et des représentants de service qui offrent un accès facile à plus de 3500 produits provenant du monde entier.

Desde 1951 Omcan ha crecido hasta convertirse en un líder en la distribución de equipos y suministros de alimentos en América del Norte industria de servicios. Nuestro éxito en estos años se puede atribuir a nuestro compromiso de fortalecer y desarrollar nuevas relaciones existentes con nuestros valiosos clientes y fabricantes. Hoy con socios de América del Norte, Europa, Asia y América del Sur, que trabajan continuamente para mejorar y crecer la empresa. Nos esforzamos por ofrecer a nuestros clientes valor excepcional a través de nuestro local de ventas y representantes de los servicios que proporcionan un fácil acceso a más de 3,500 productos con origen a nivel mundial.

